 




53



XM  
530-000/1

1





# FONCTION : CHARGE ET DEMARRAGE

 *LISTE DES SCHEMAS*






## CHARGE ET DEMARRAGE

NUMERO	DIRECTION	VALIDITE	DESIGNATION
530-00/10	Gauche	05/89 → → 10/92	XM TT
530-00/10a	Gauche	10/92 →	Evolution a : Modification interconnexions entre faisceaux PB, AV, MT.

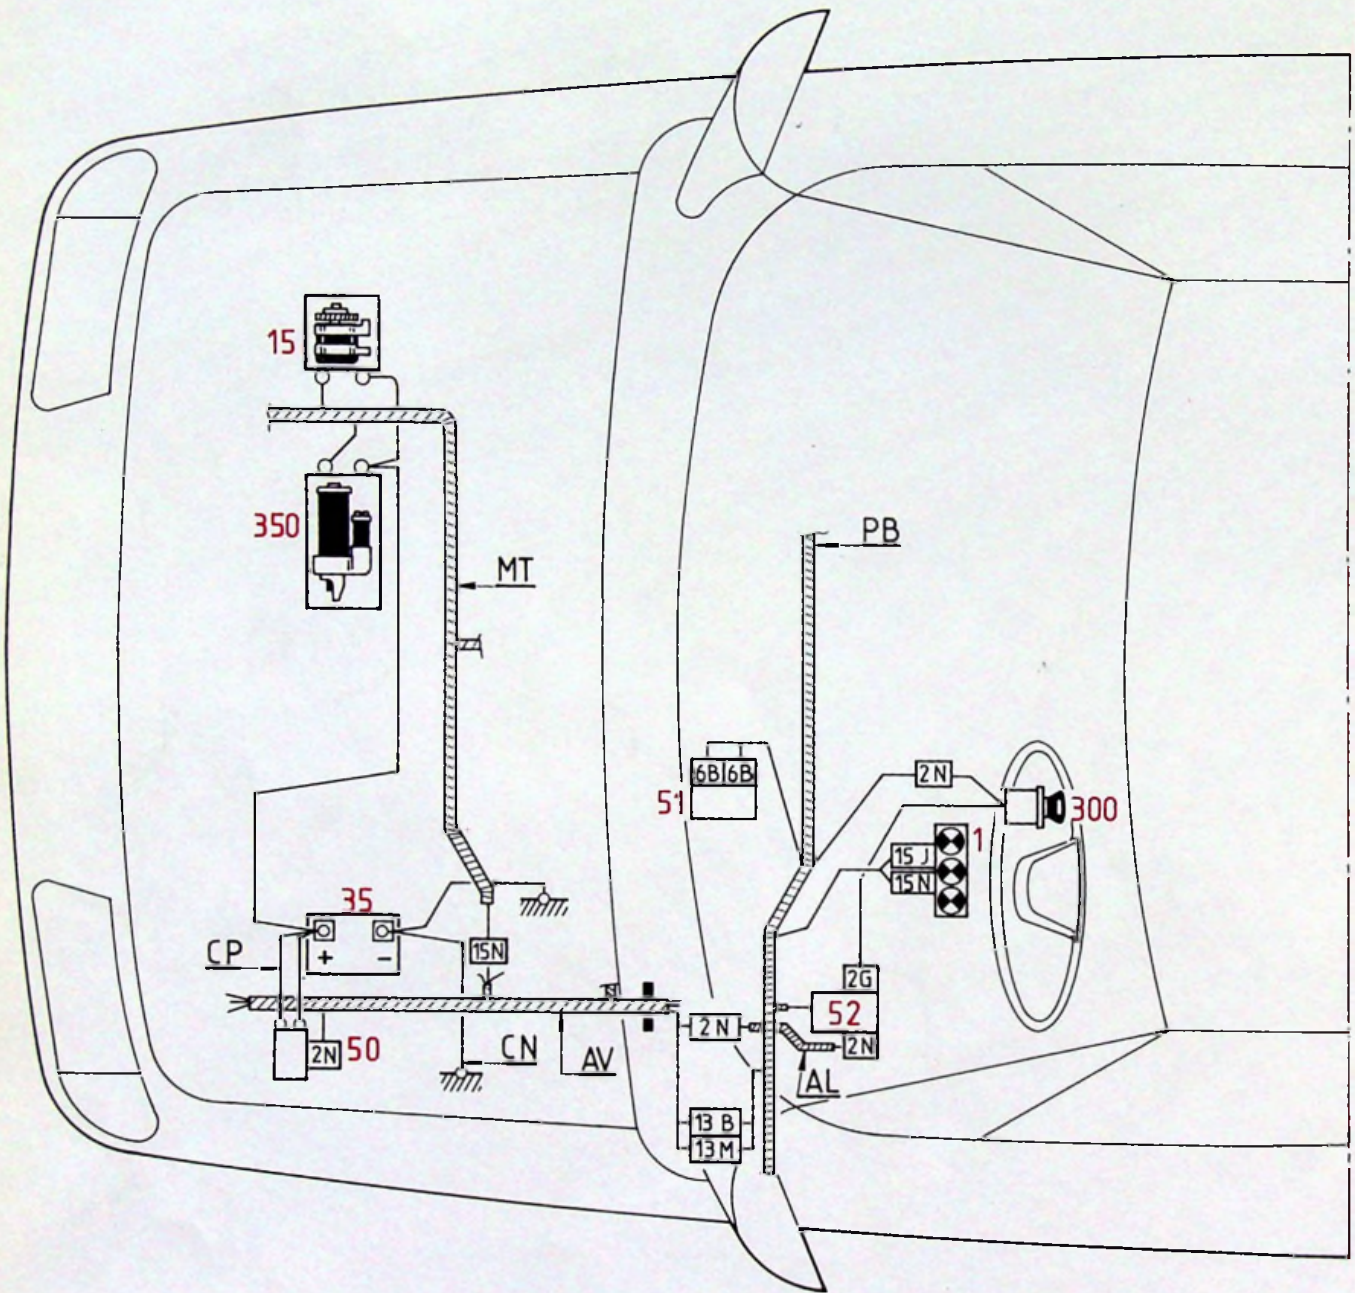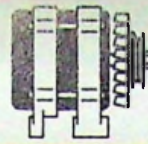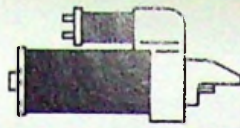




53

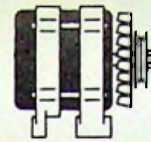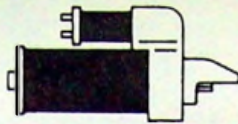 





XM  
530-00/10

3

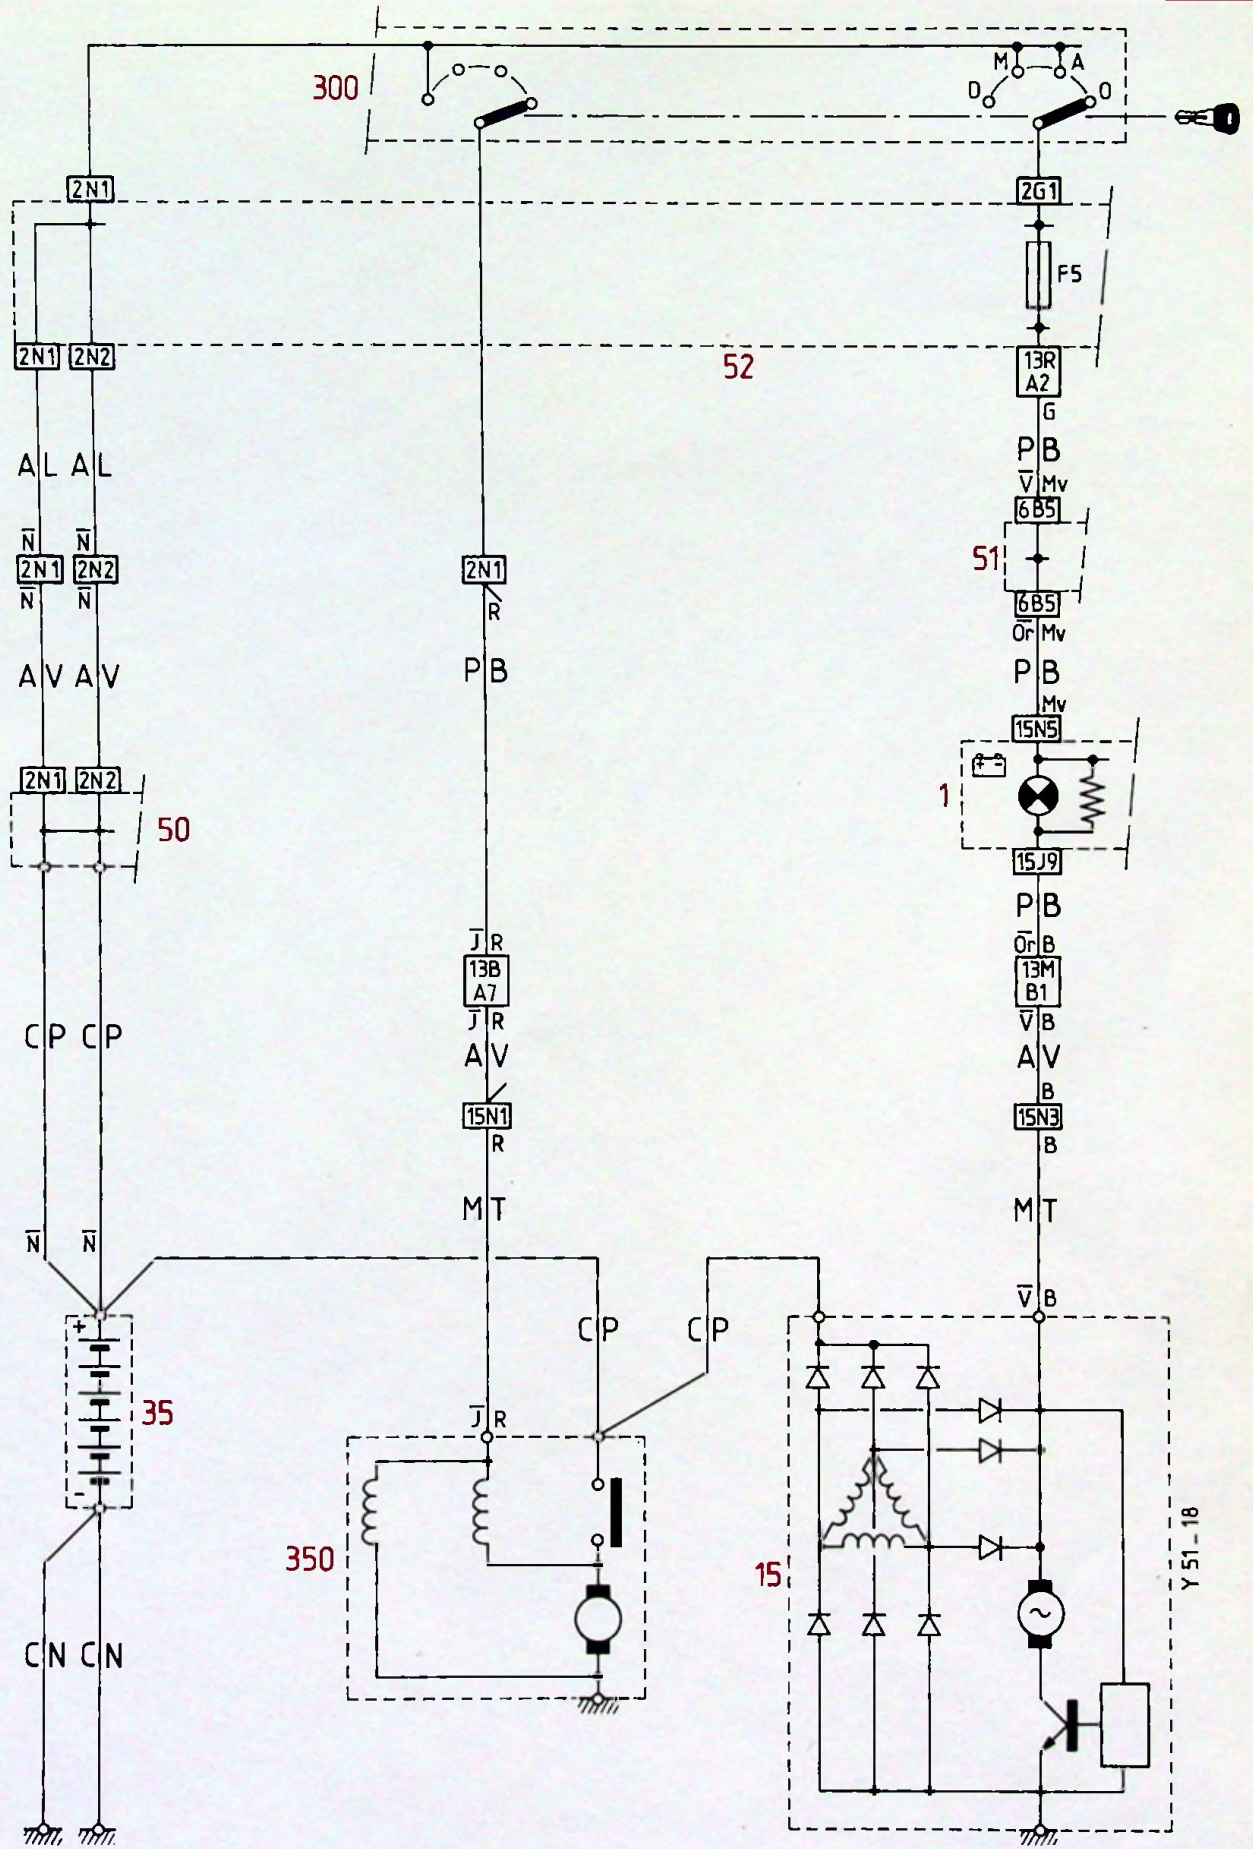




1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22

 Y 51 - 18

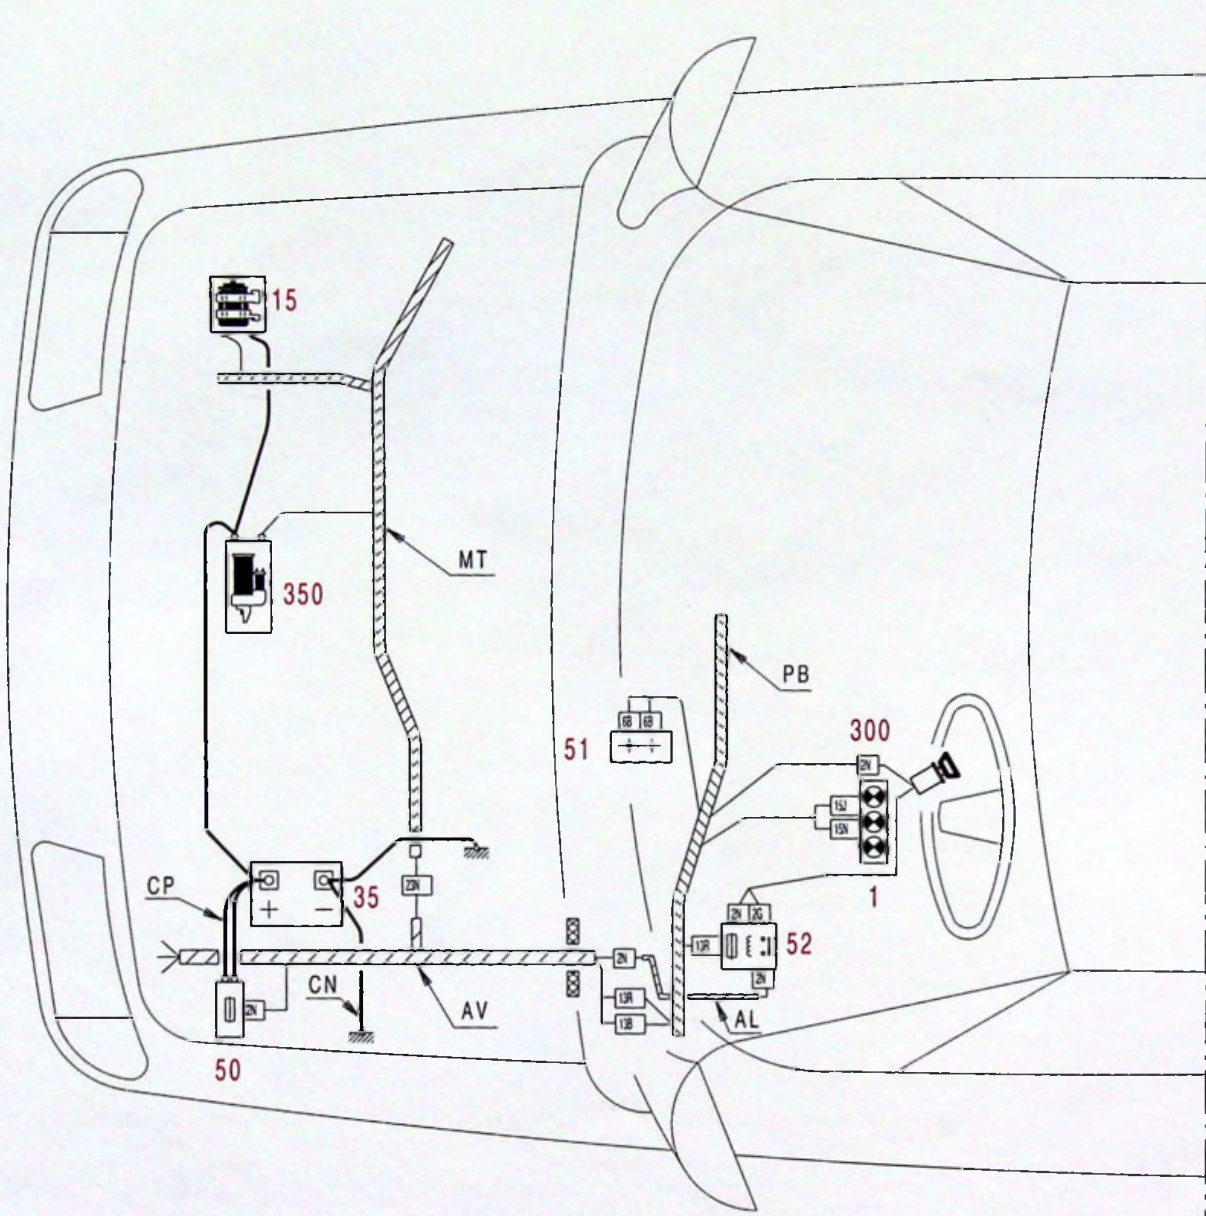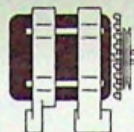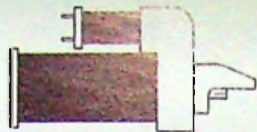




53

 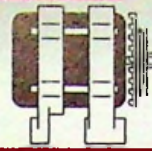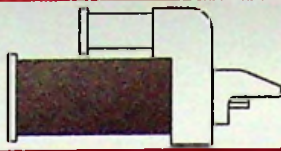

XM  
530-00/10a

3

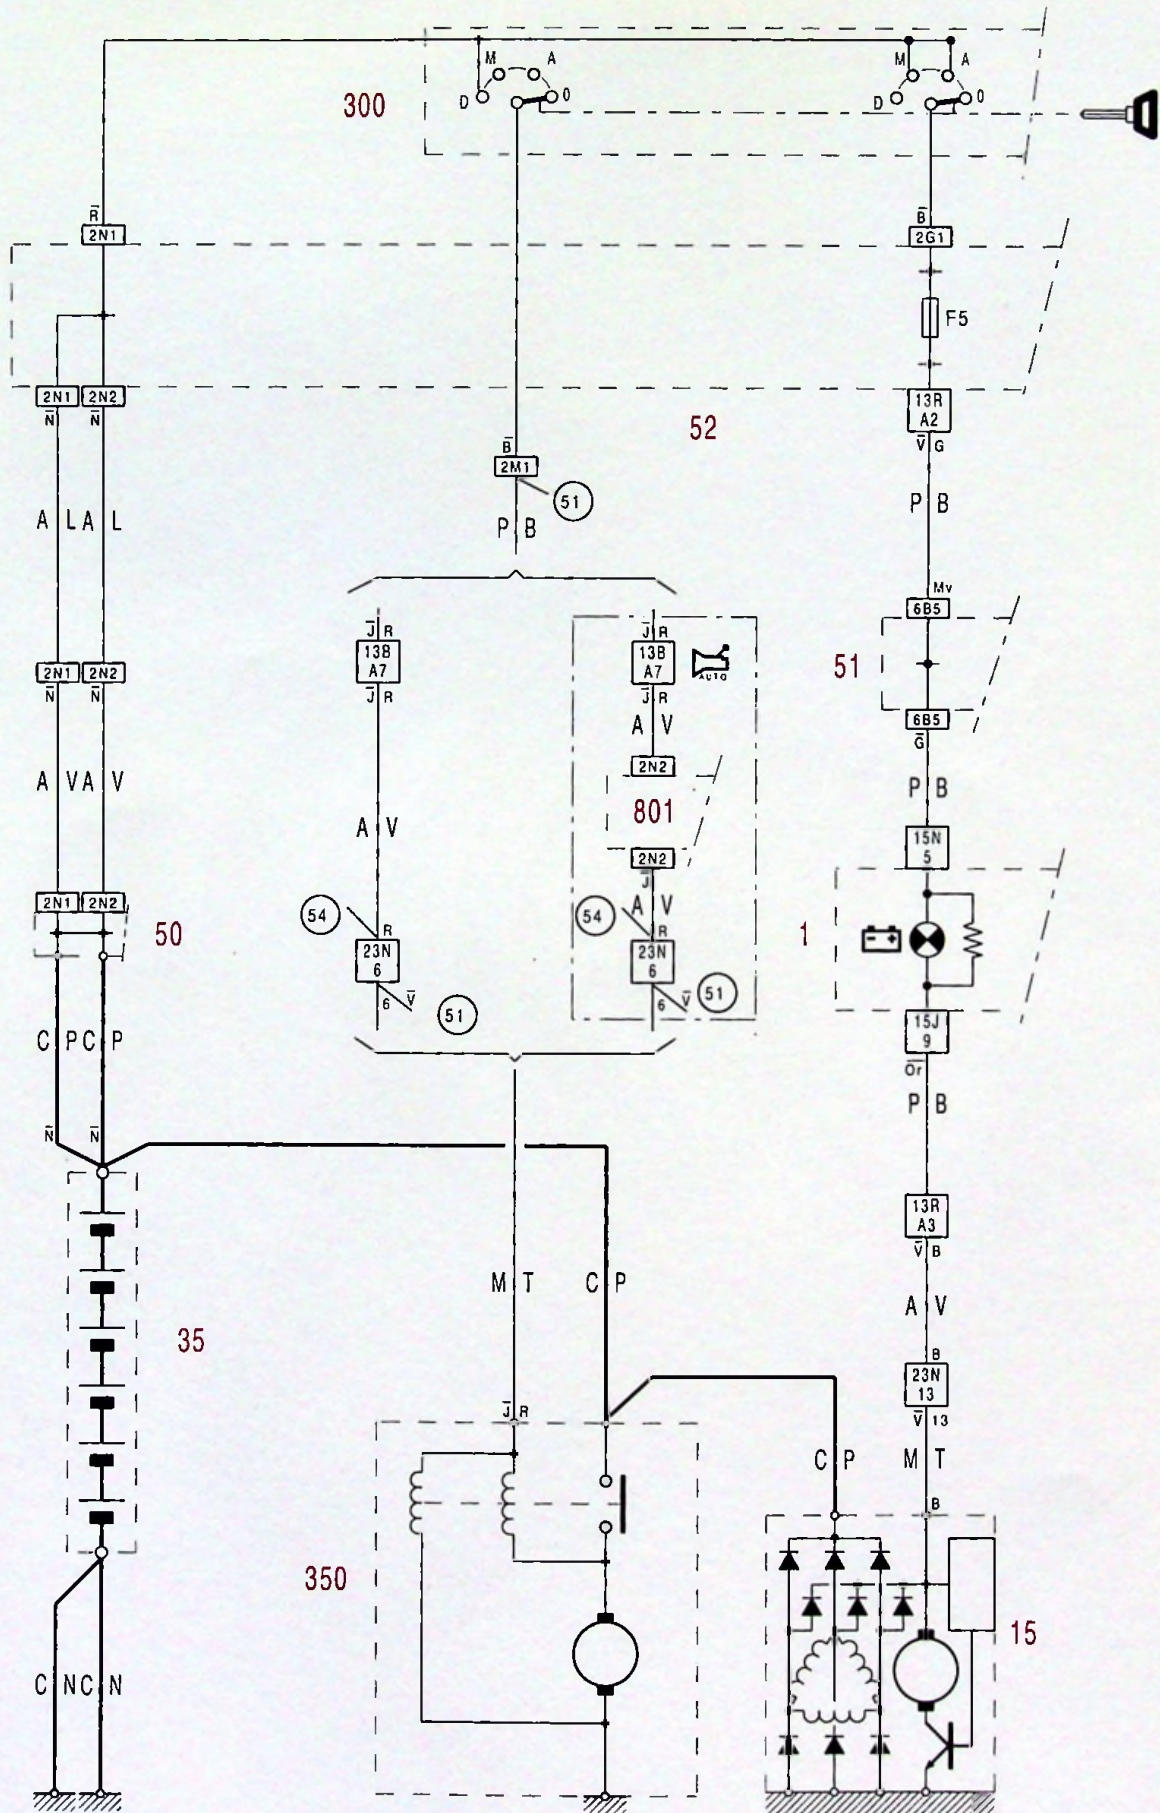

530-00/10a

530-00/10a

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29