



57



**XM**  
**570-000/1**

1

## **FONCTION : FREINAGE**

*LISTE DES SCHÉMAS*







57



XM  
571-00/10


3

4

XM  
571-00/10



57

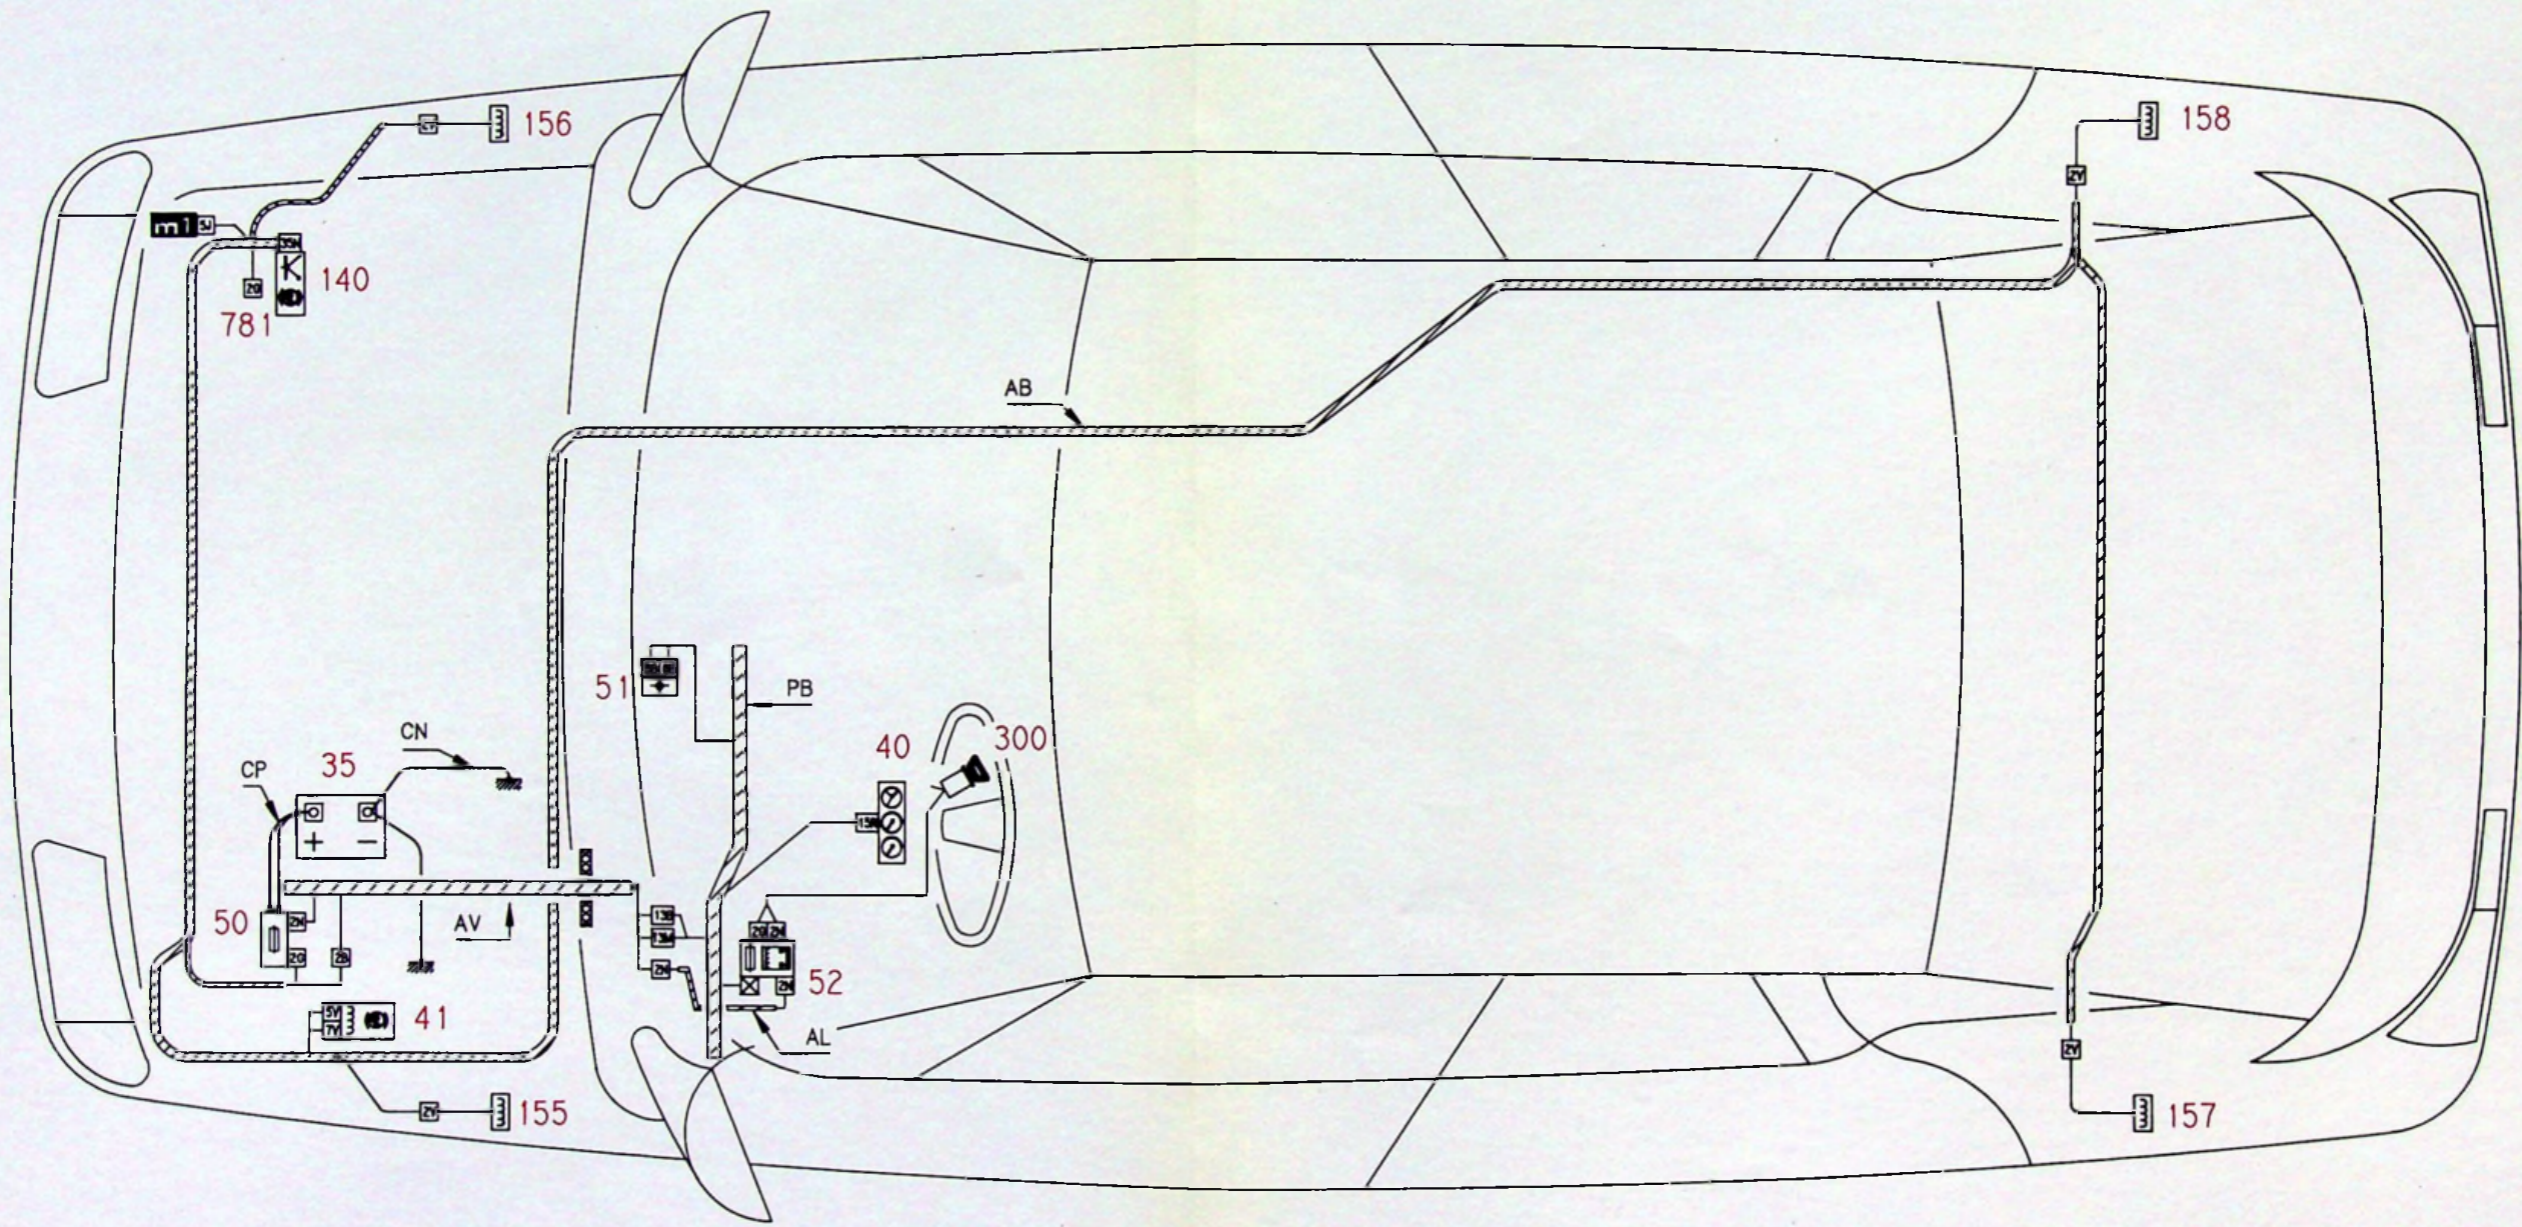




57



XM  
571-00/10

5

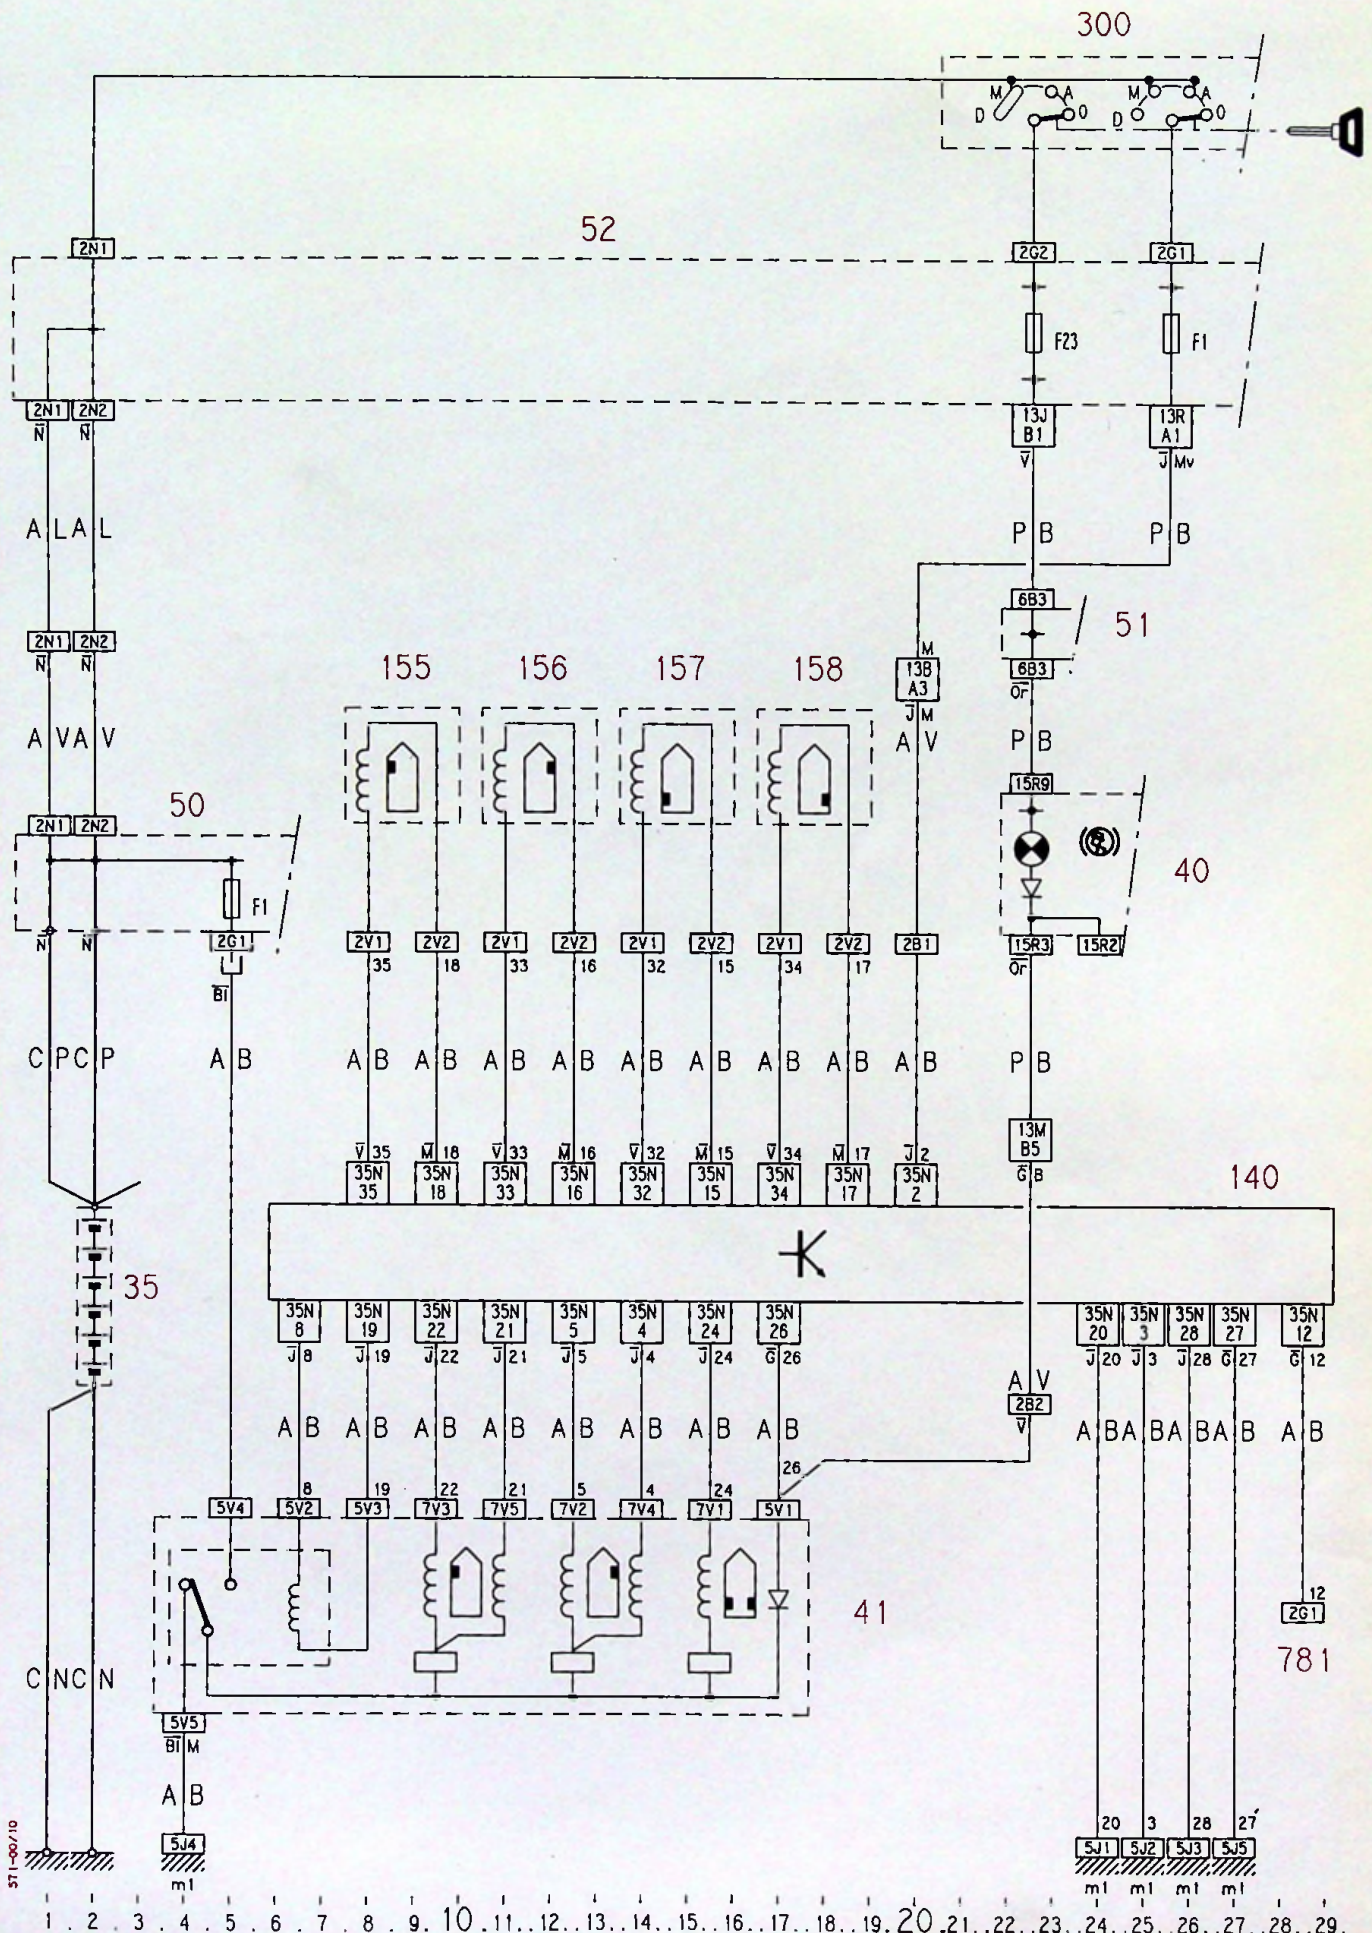

571-00/10




57



XM  
571-00/10a

5

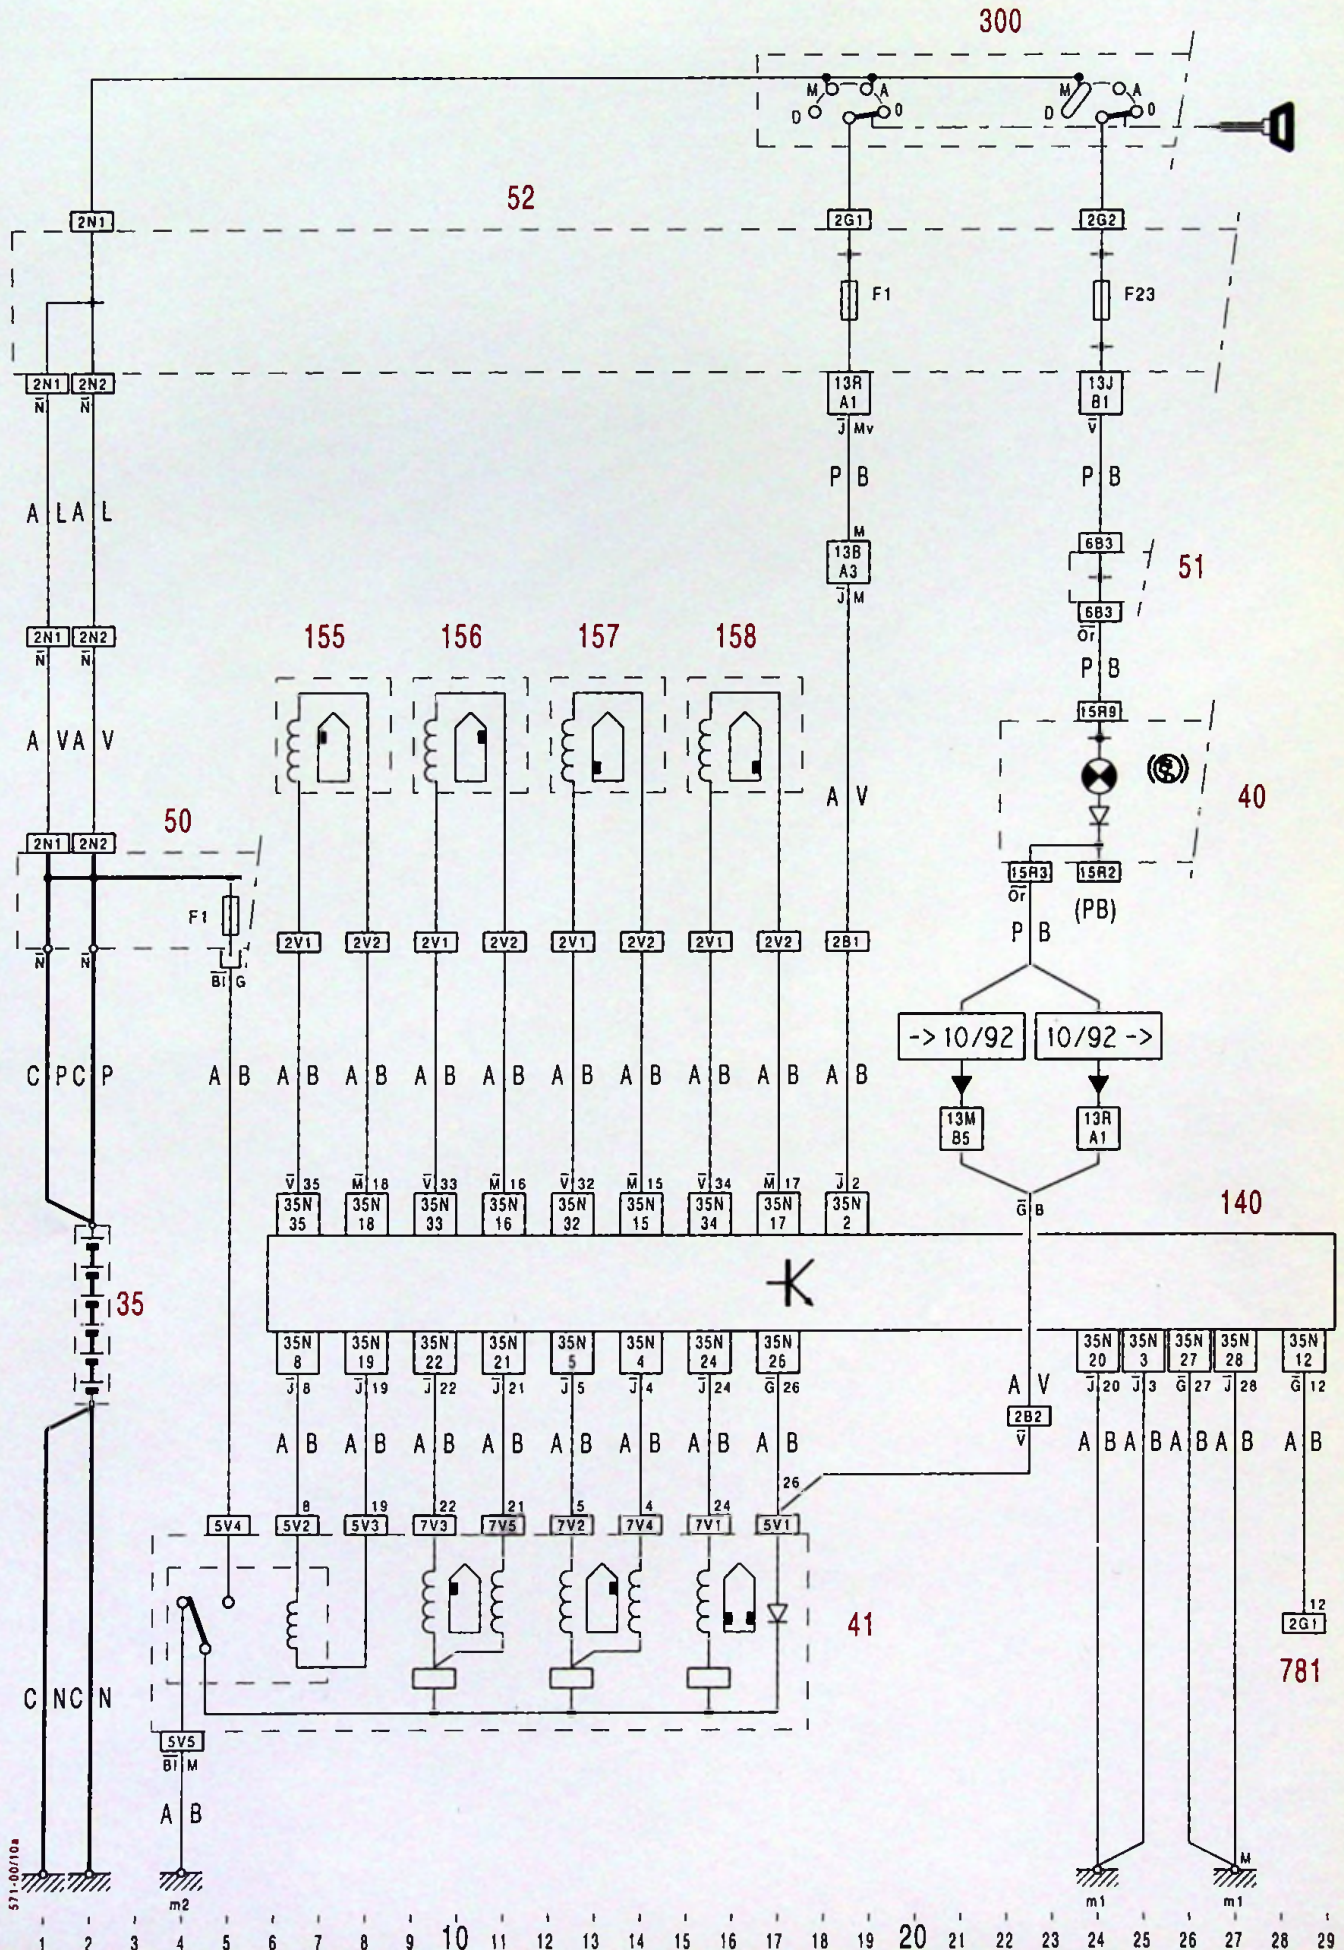



57



XM  
571-00/30


3

4

XM  
571-00/30



57

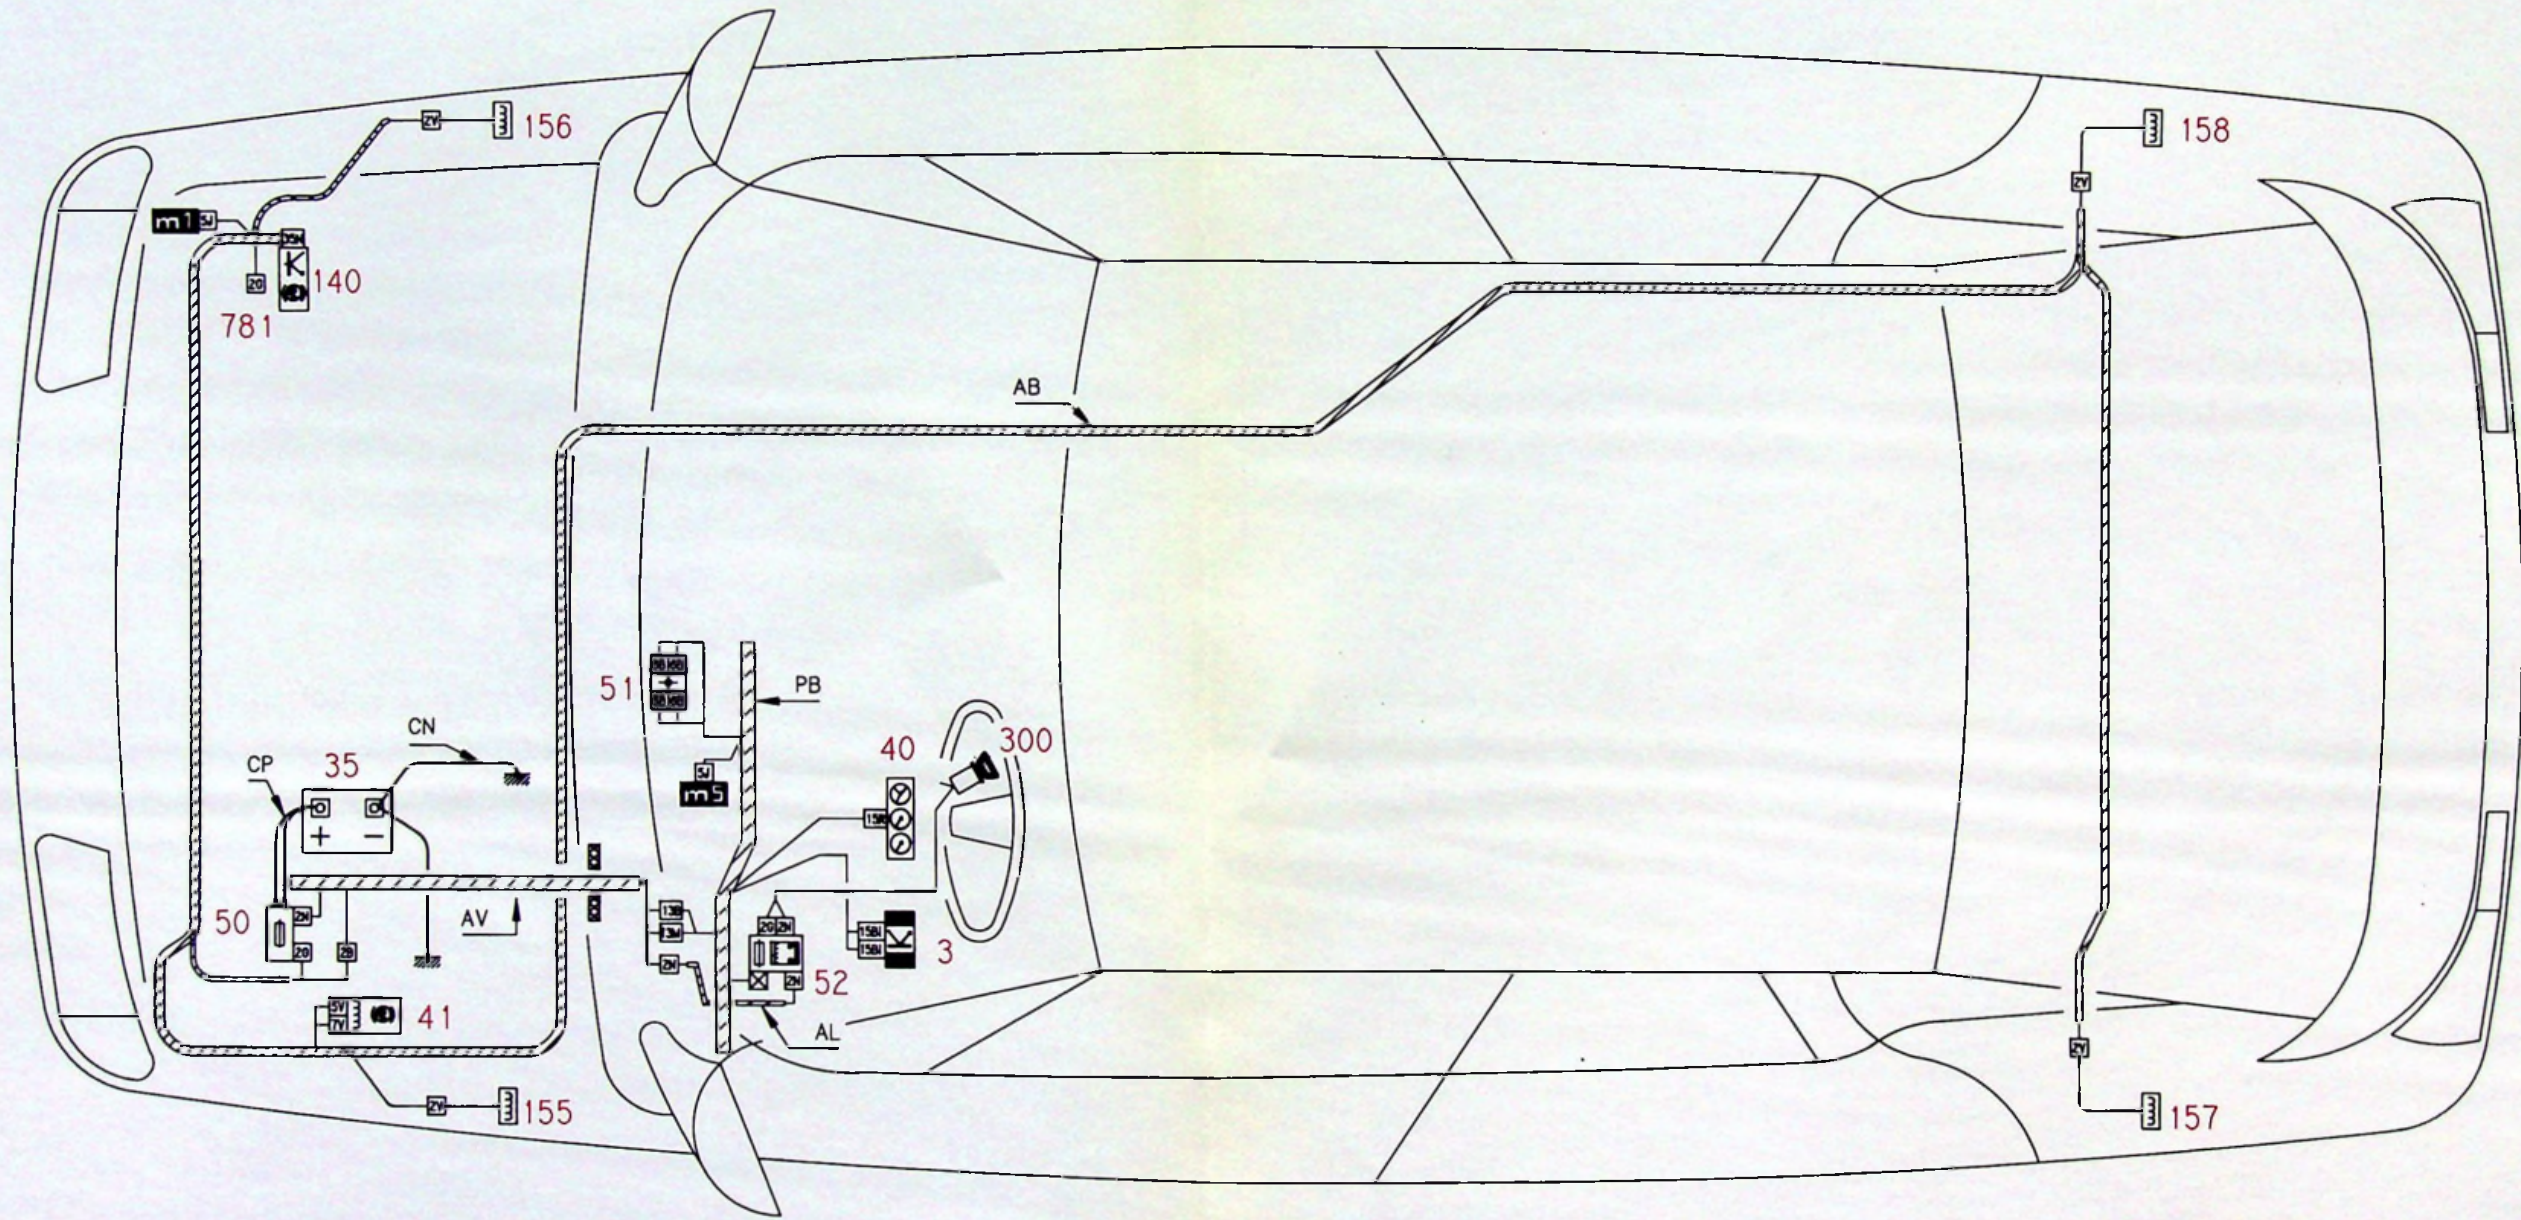




57



XM  
571-00/30

5

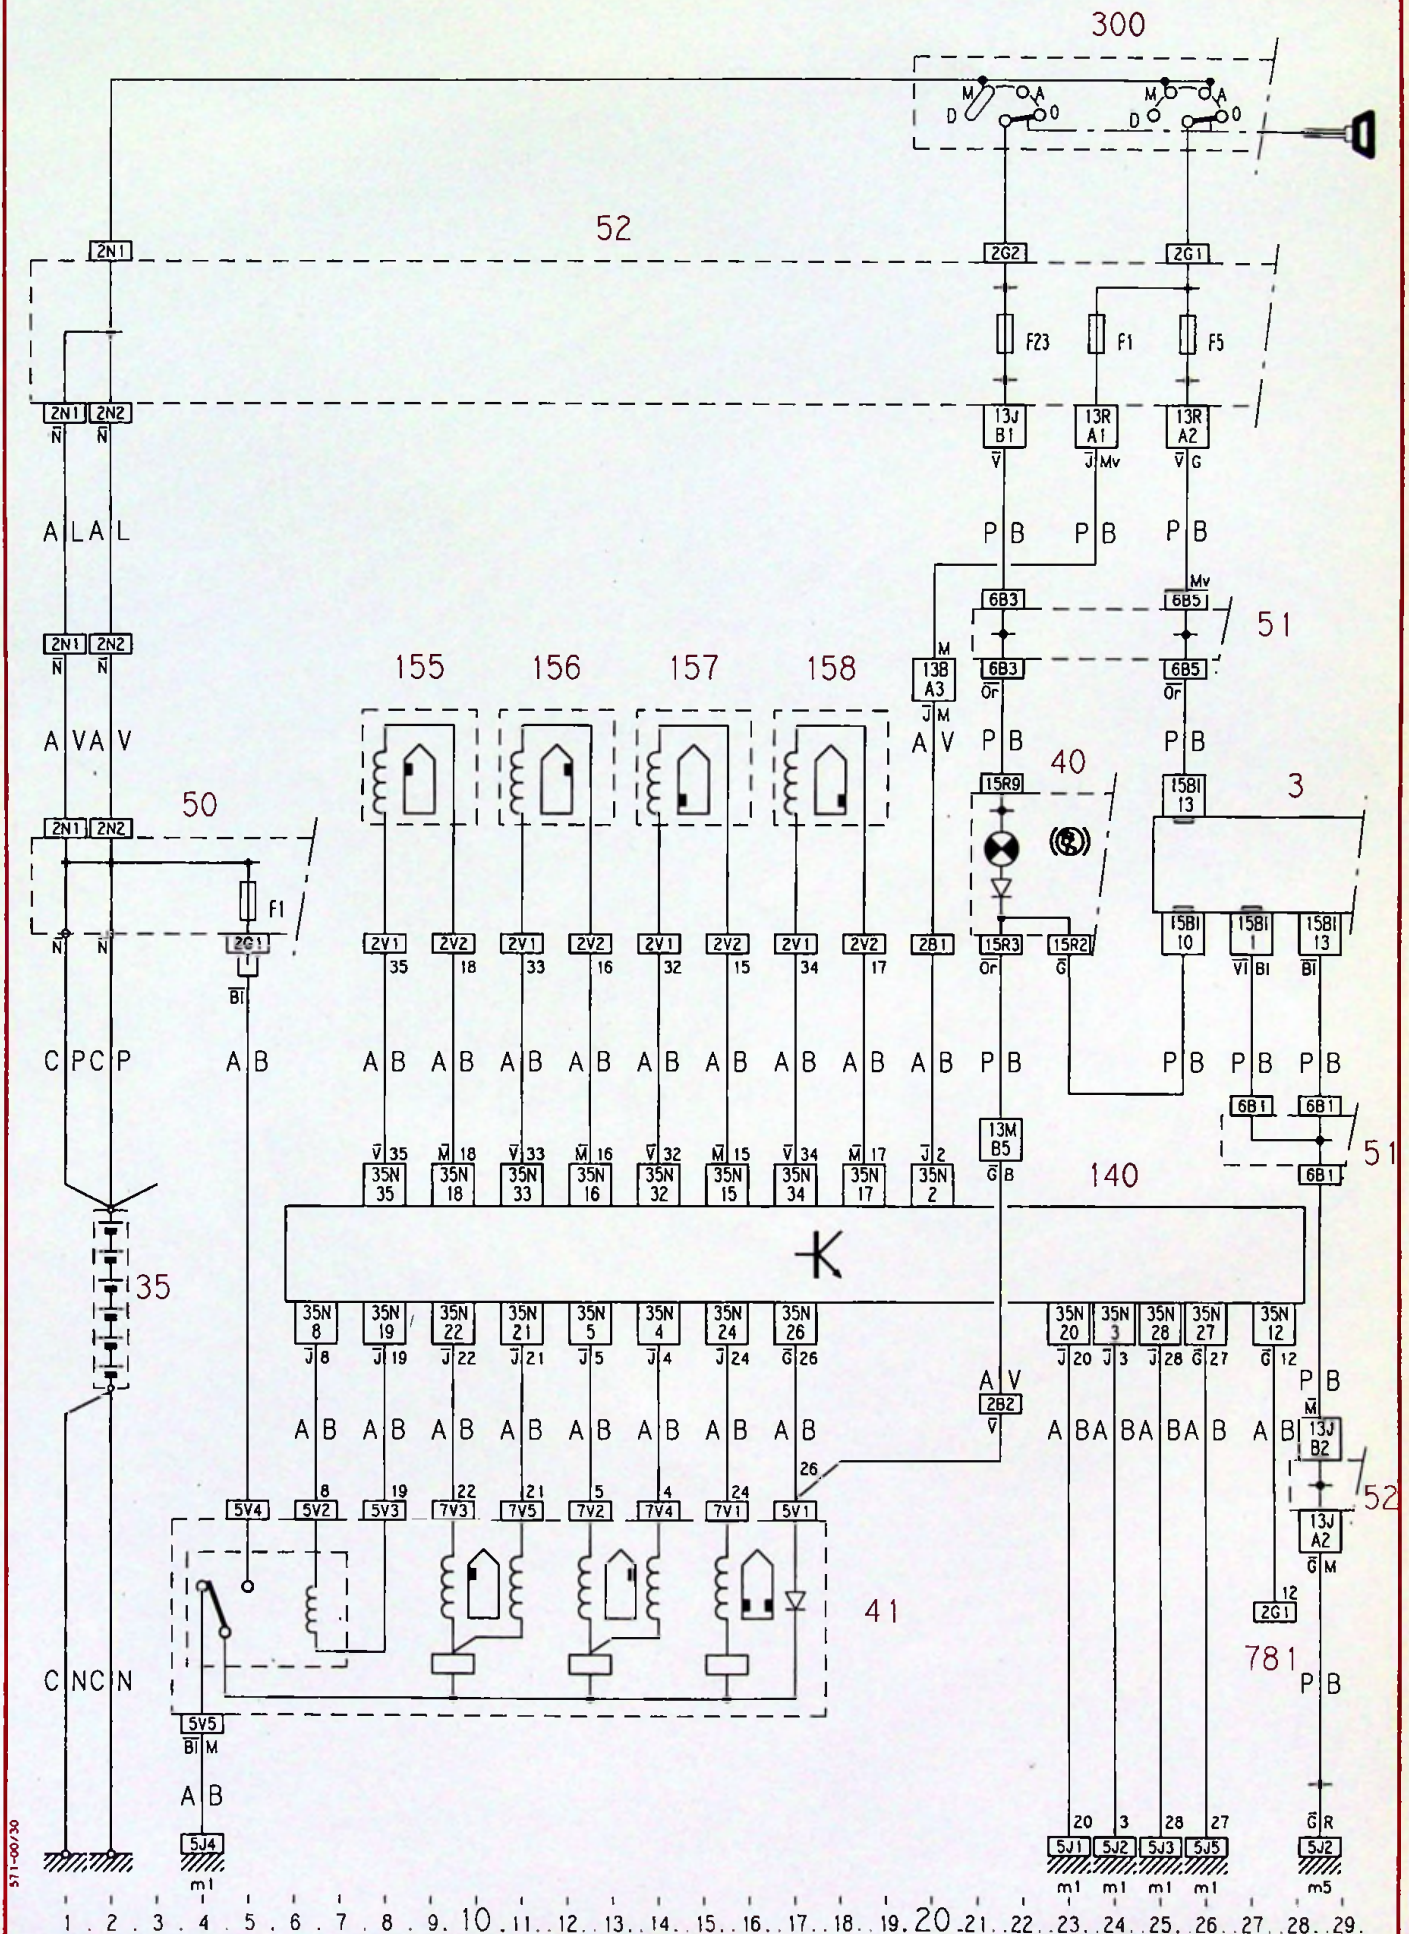






57



XM  
571-00/30a

5

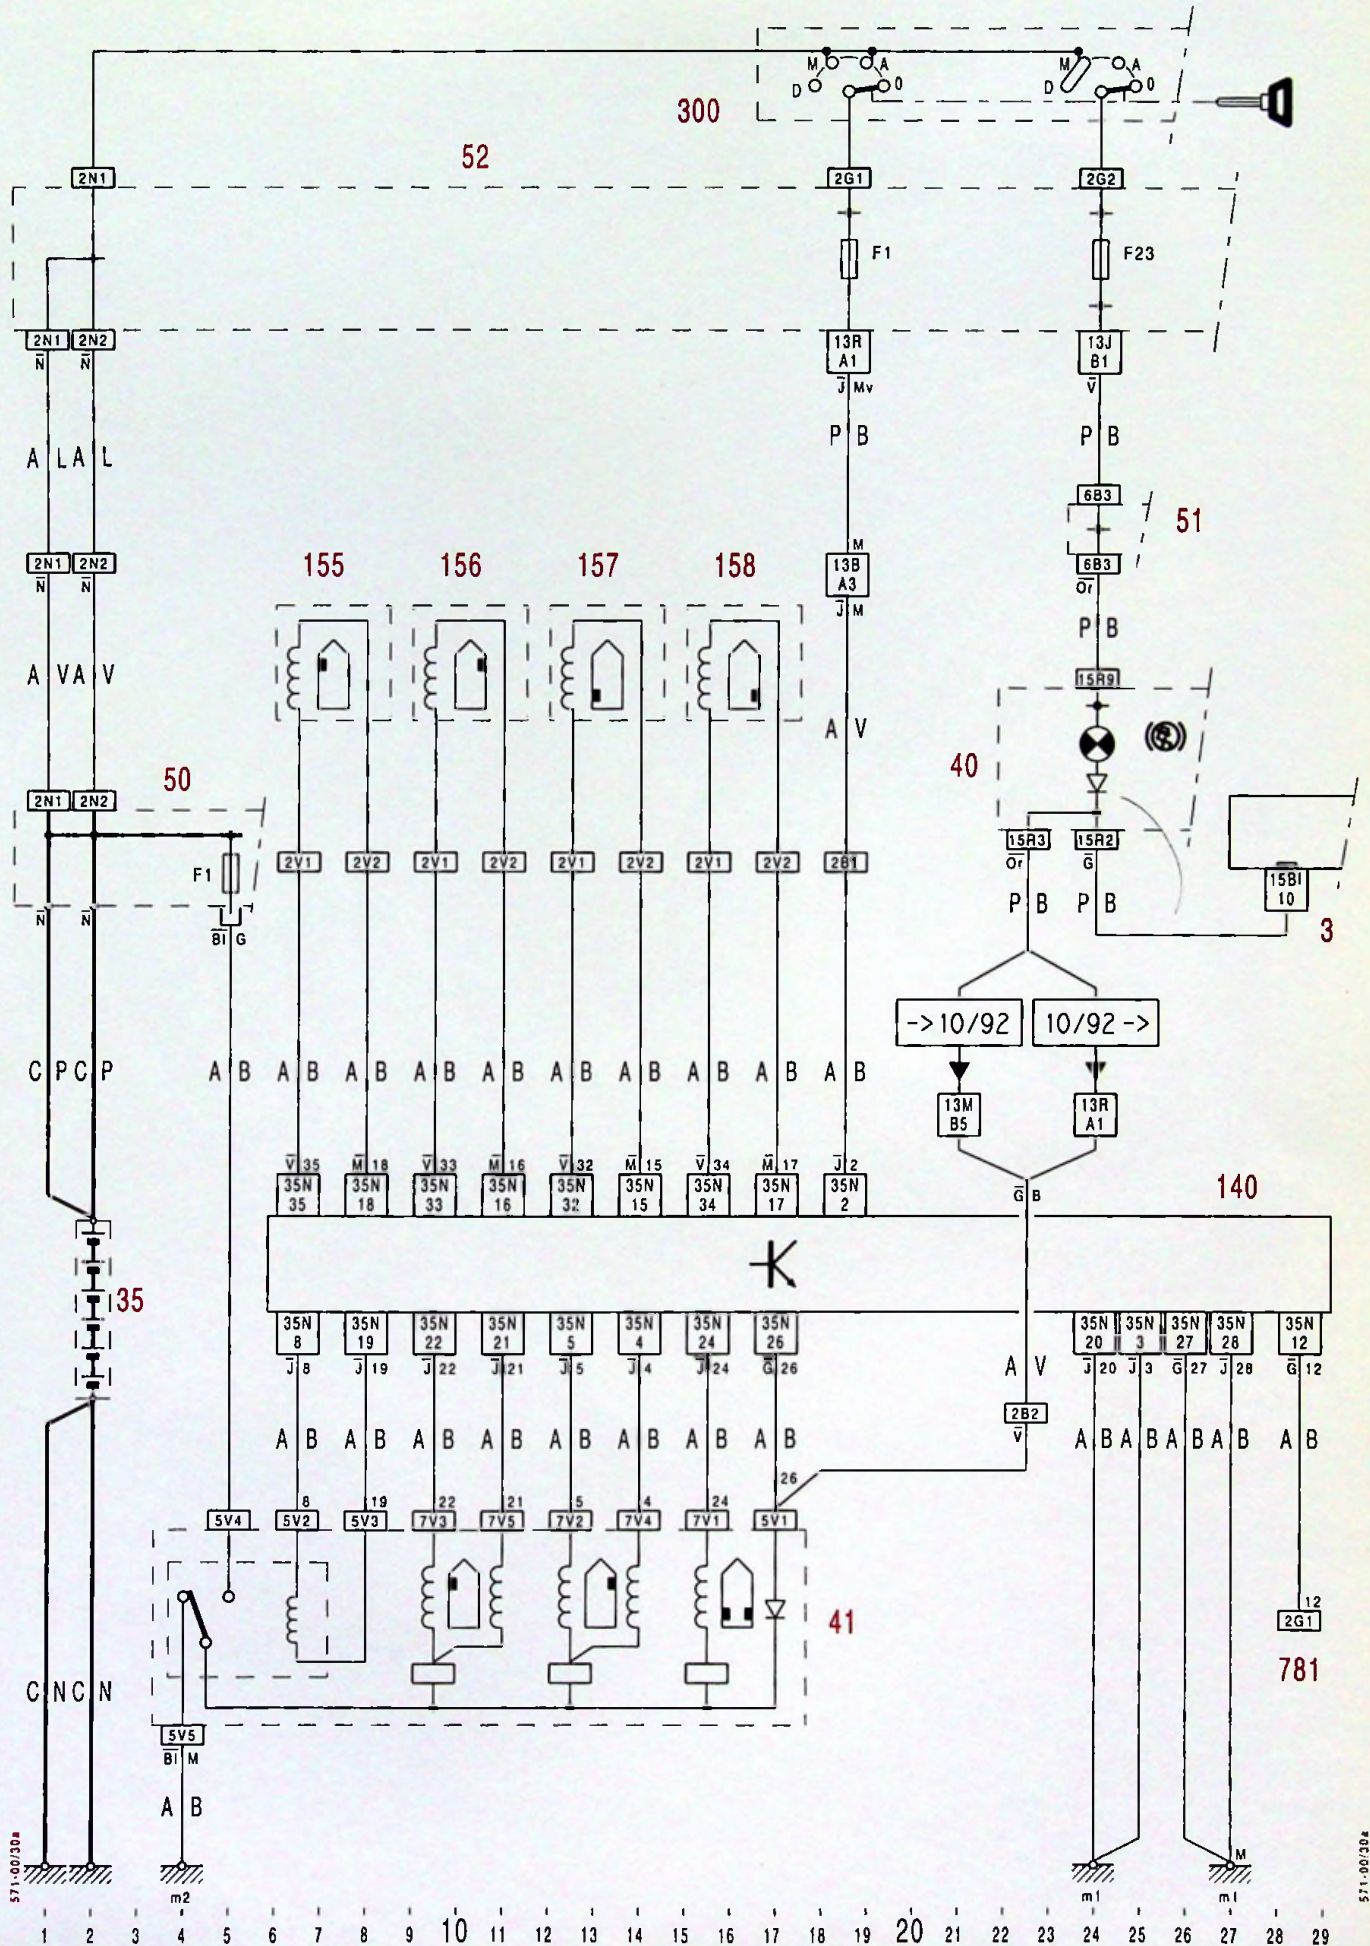



57



XM  
571-00/40


3

4

XM  
571-00/40



57

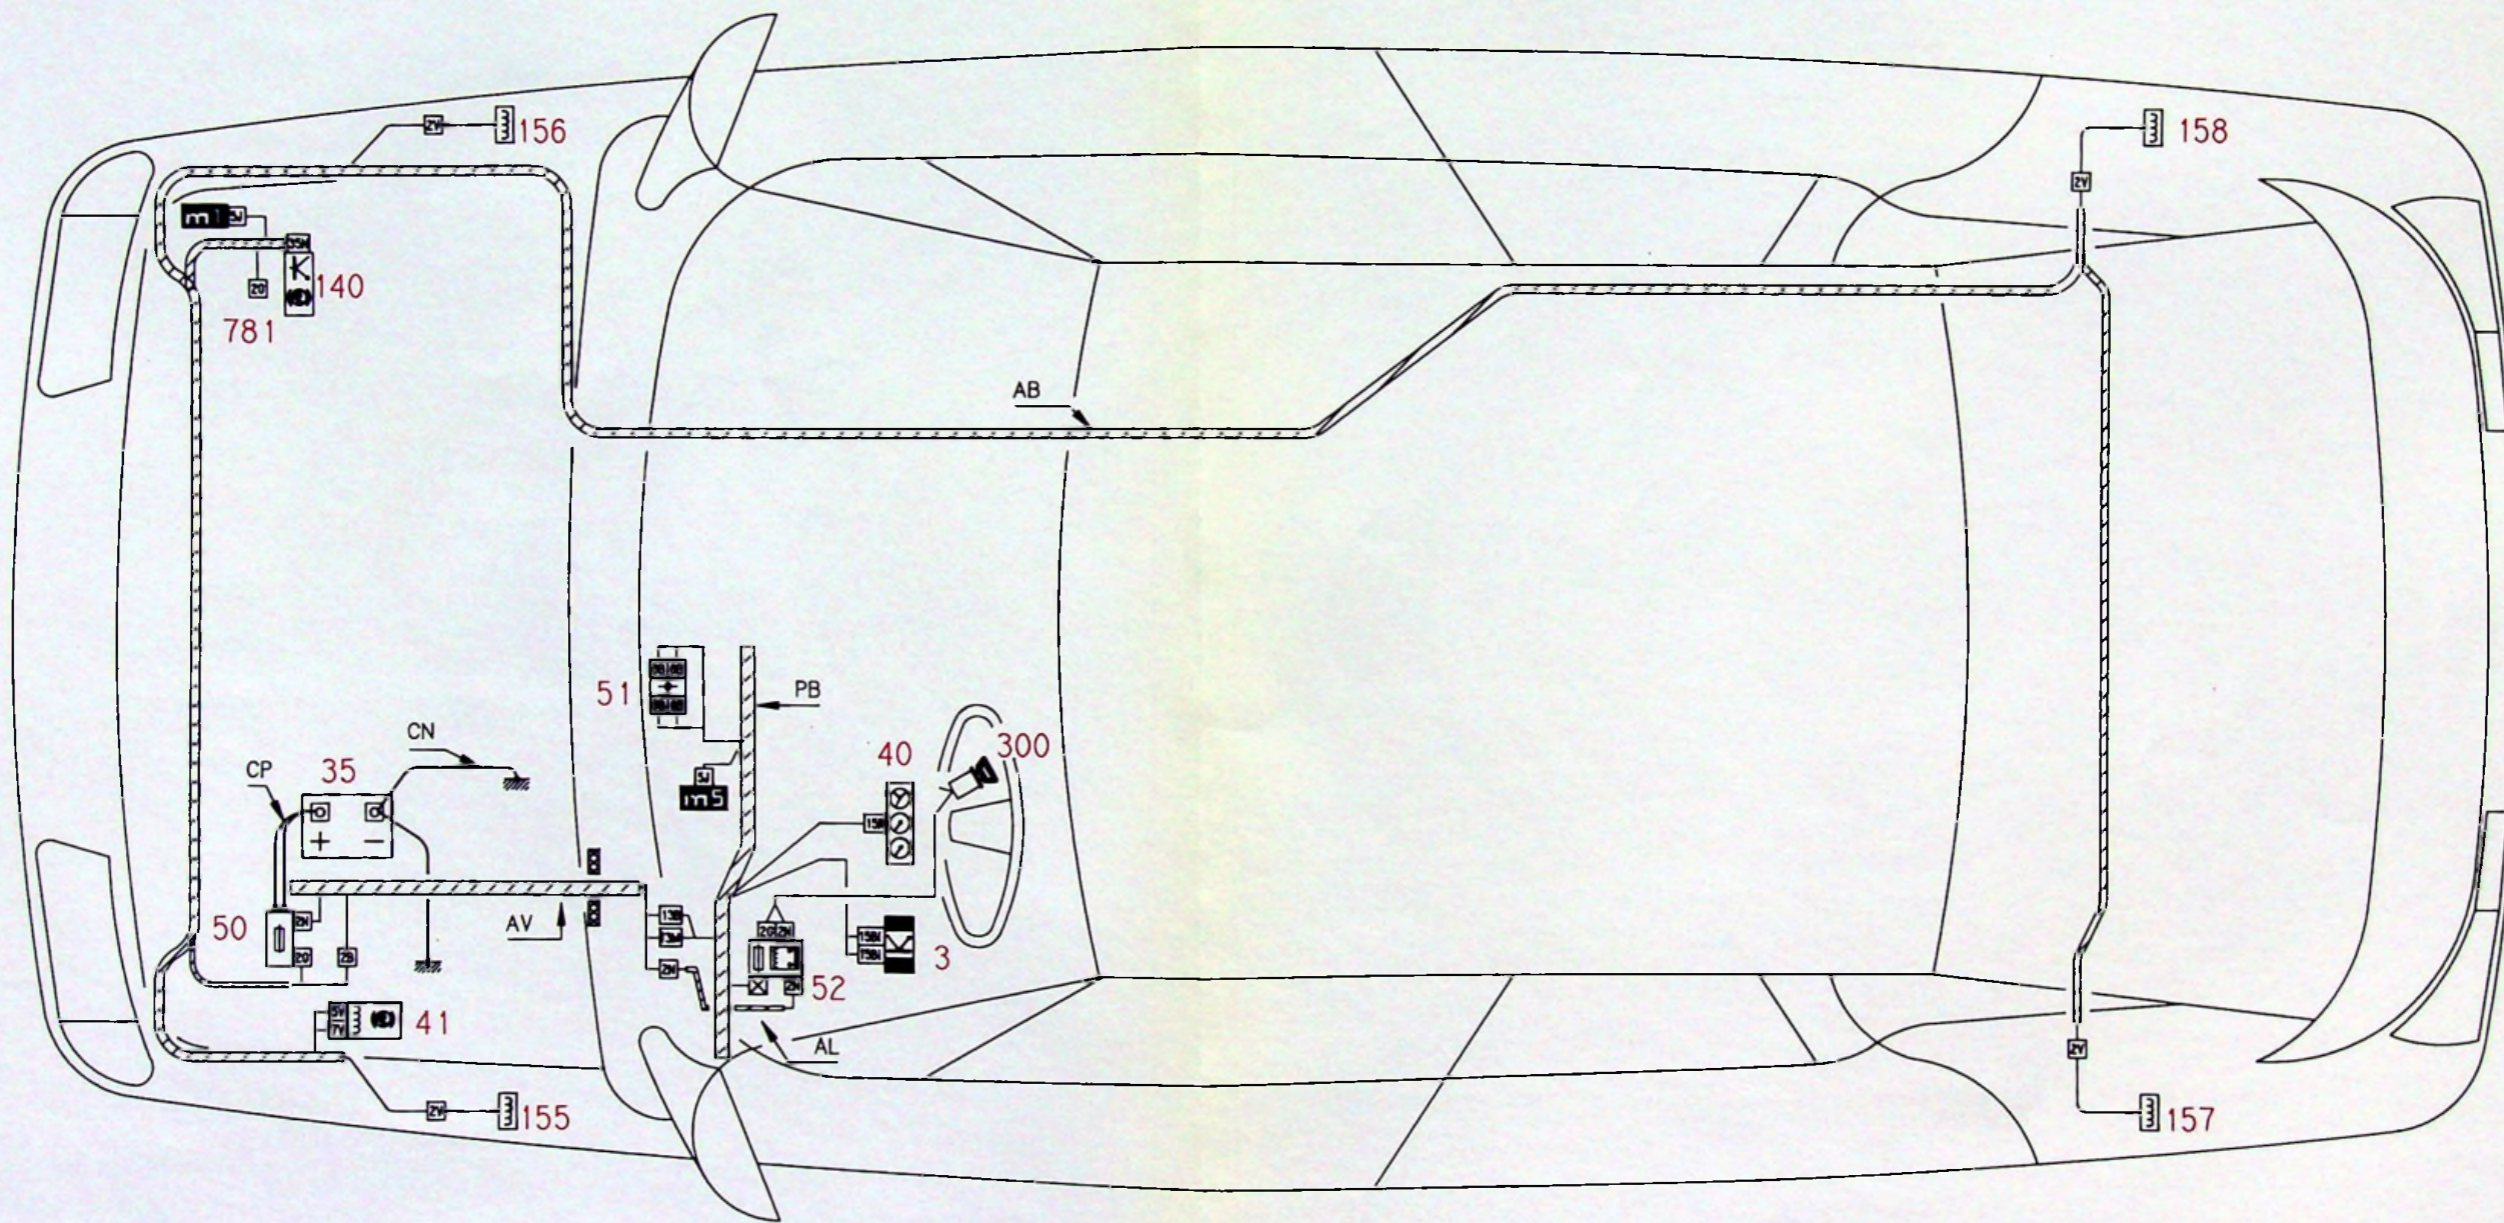




57



XM  
571-00/40

5

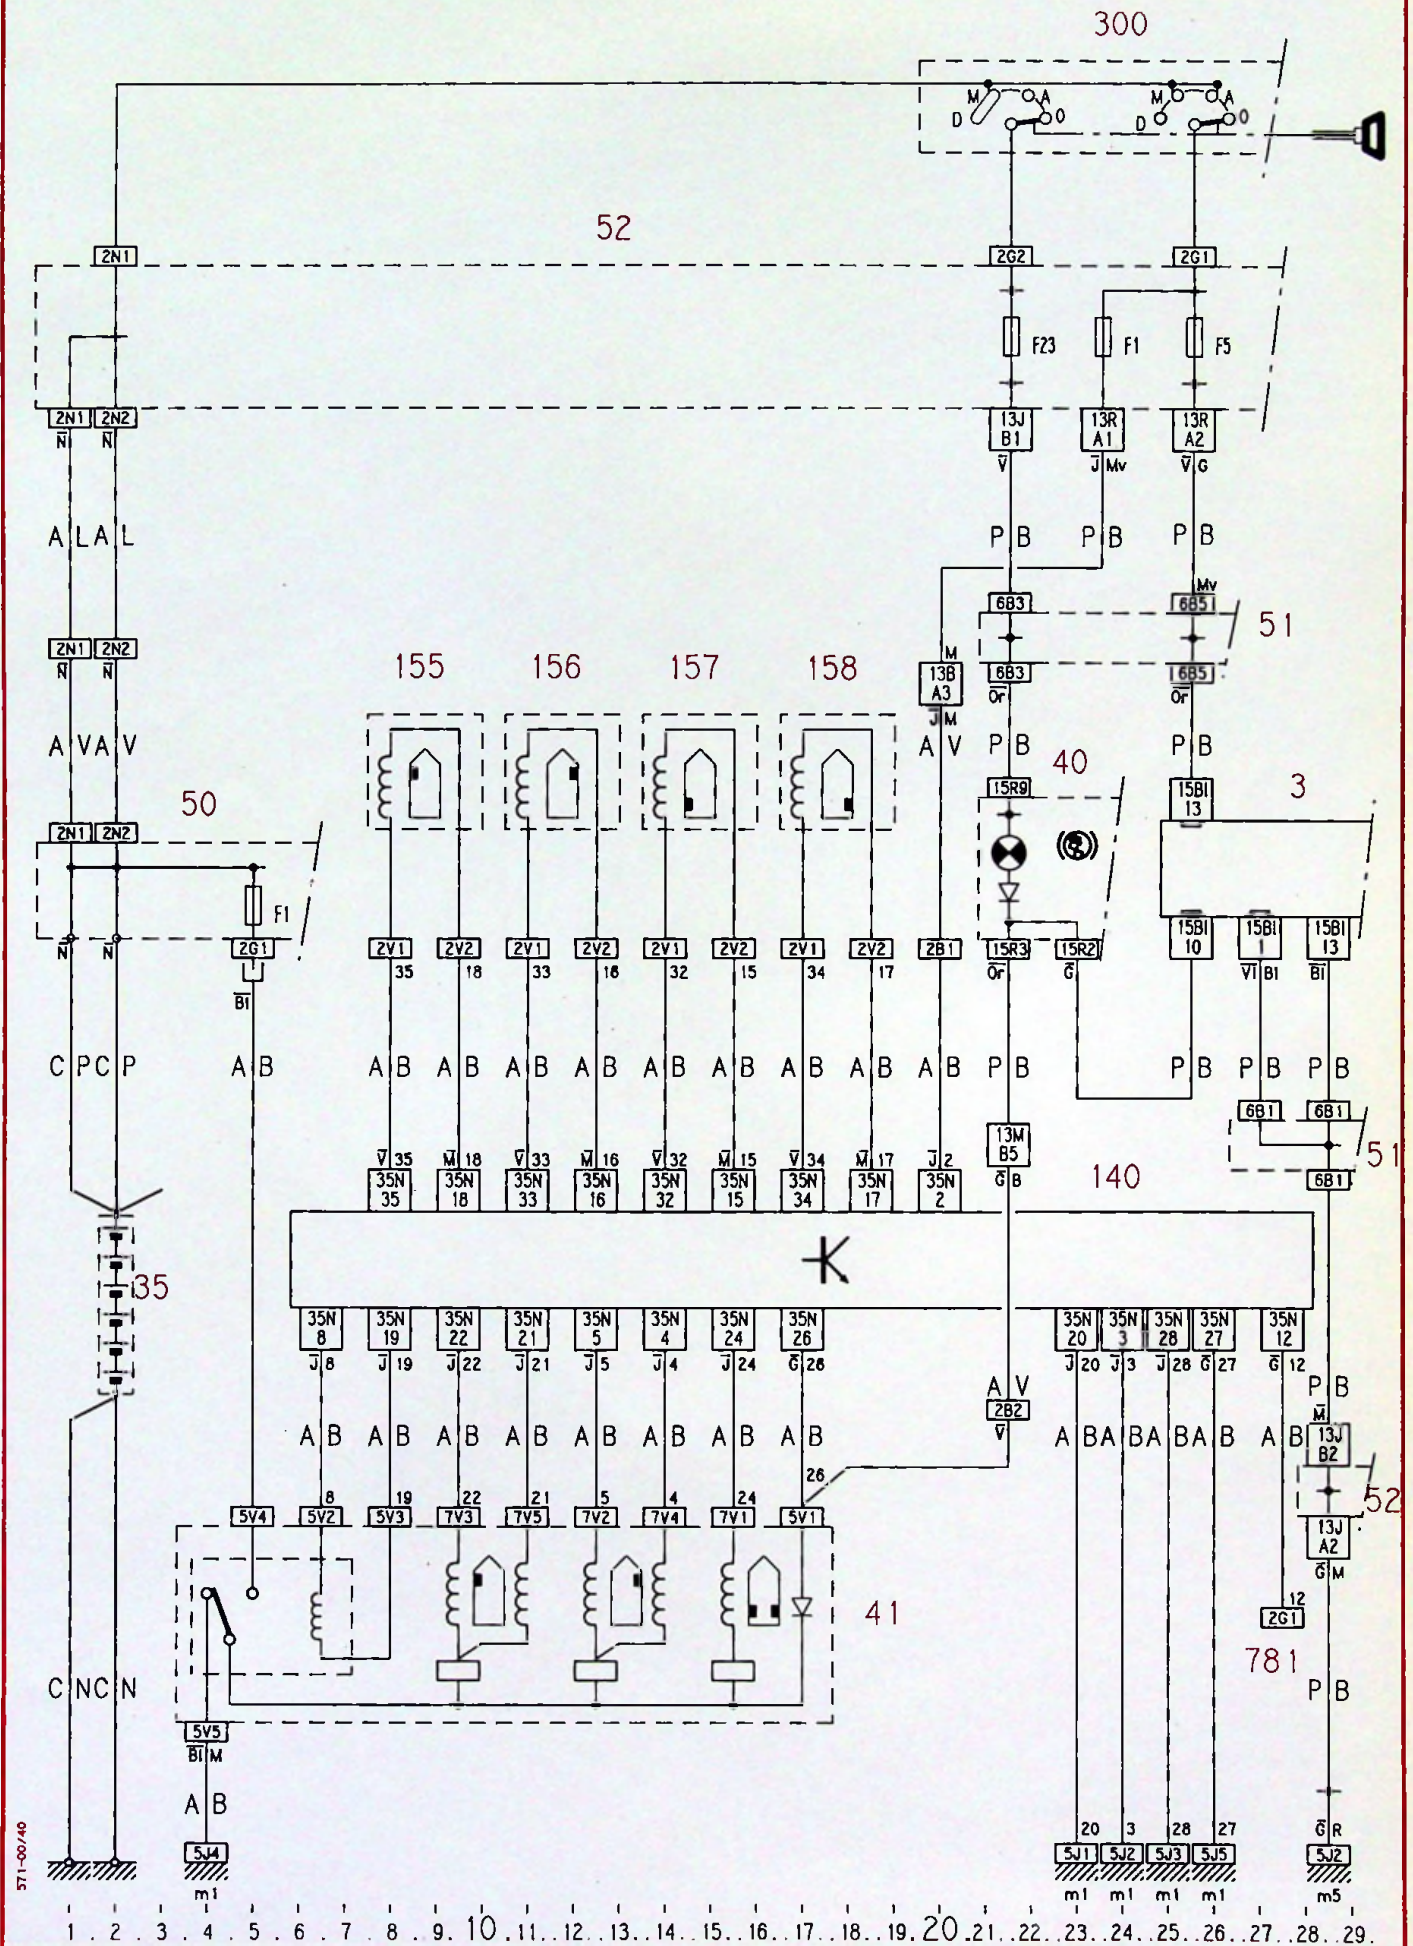




57



XM  
571-00/40a

5

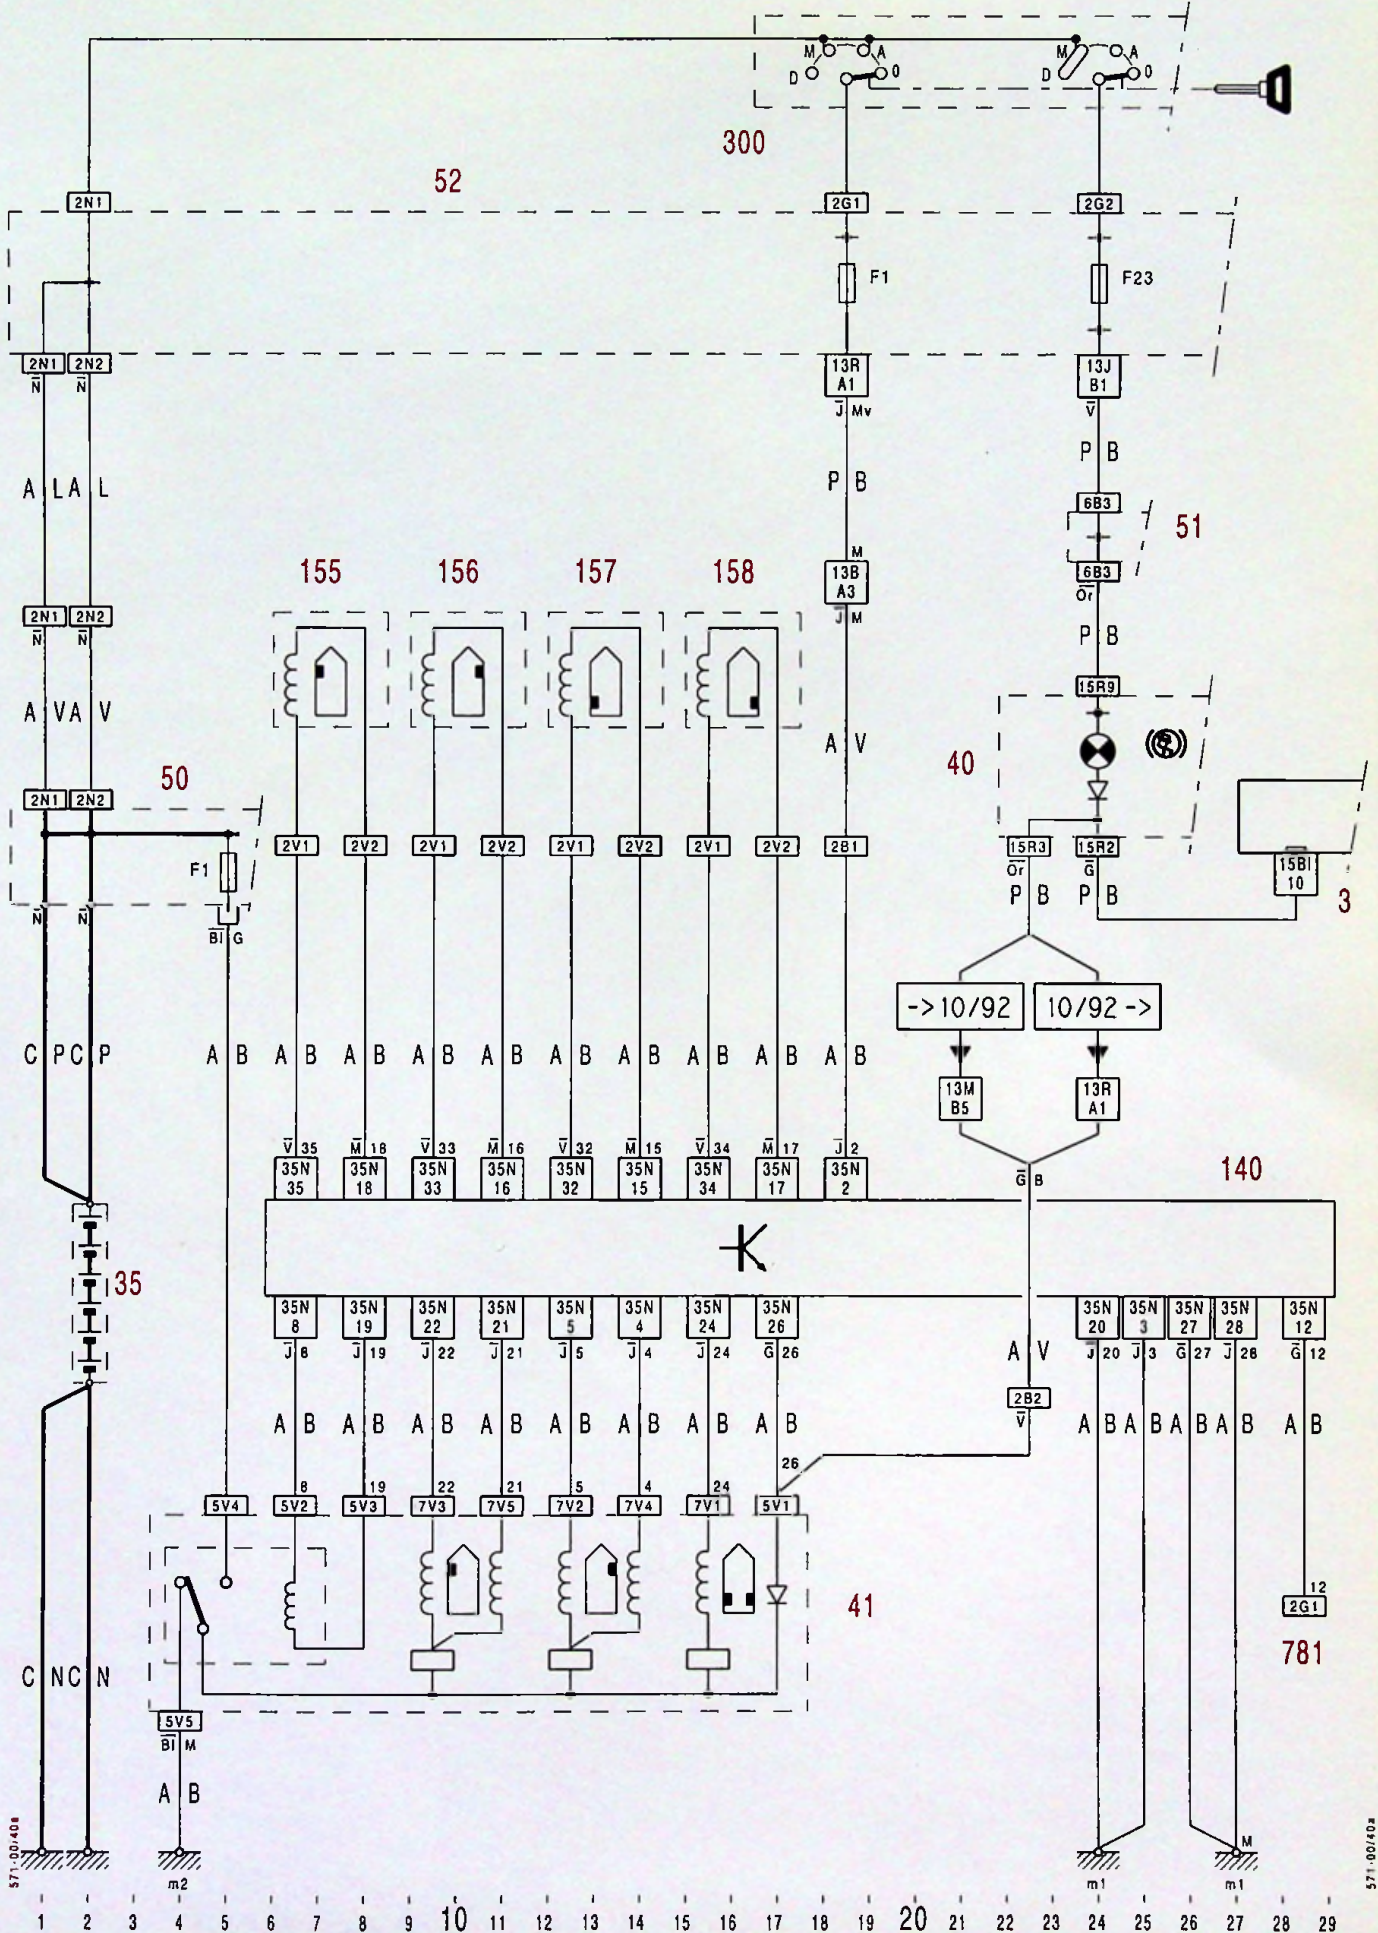



57



XM  
571-2/20


3

4

XM  
571-2/20



57

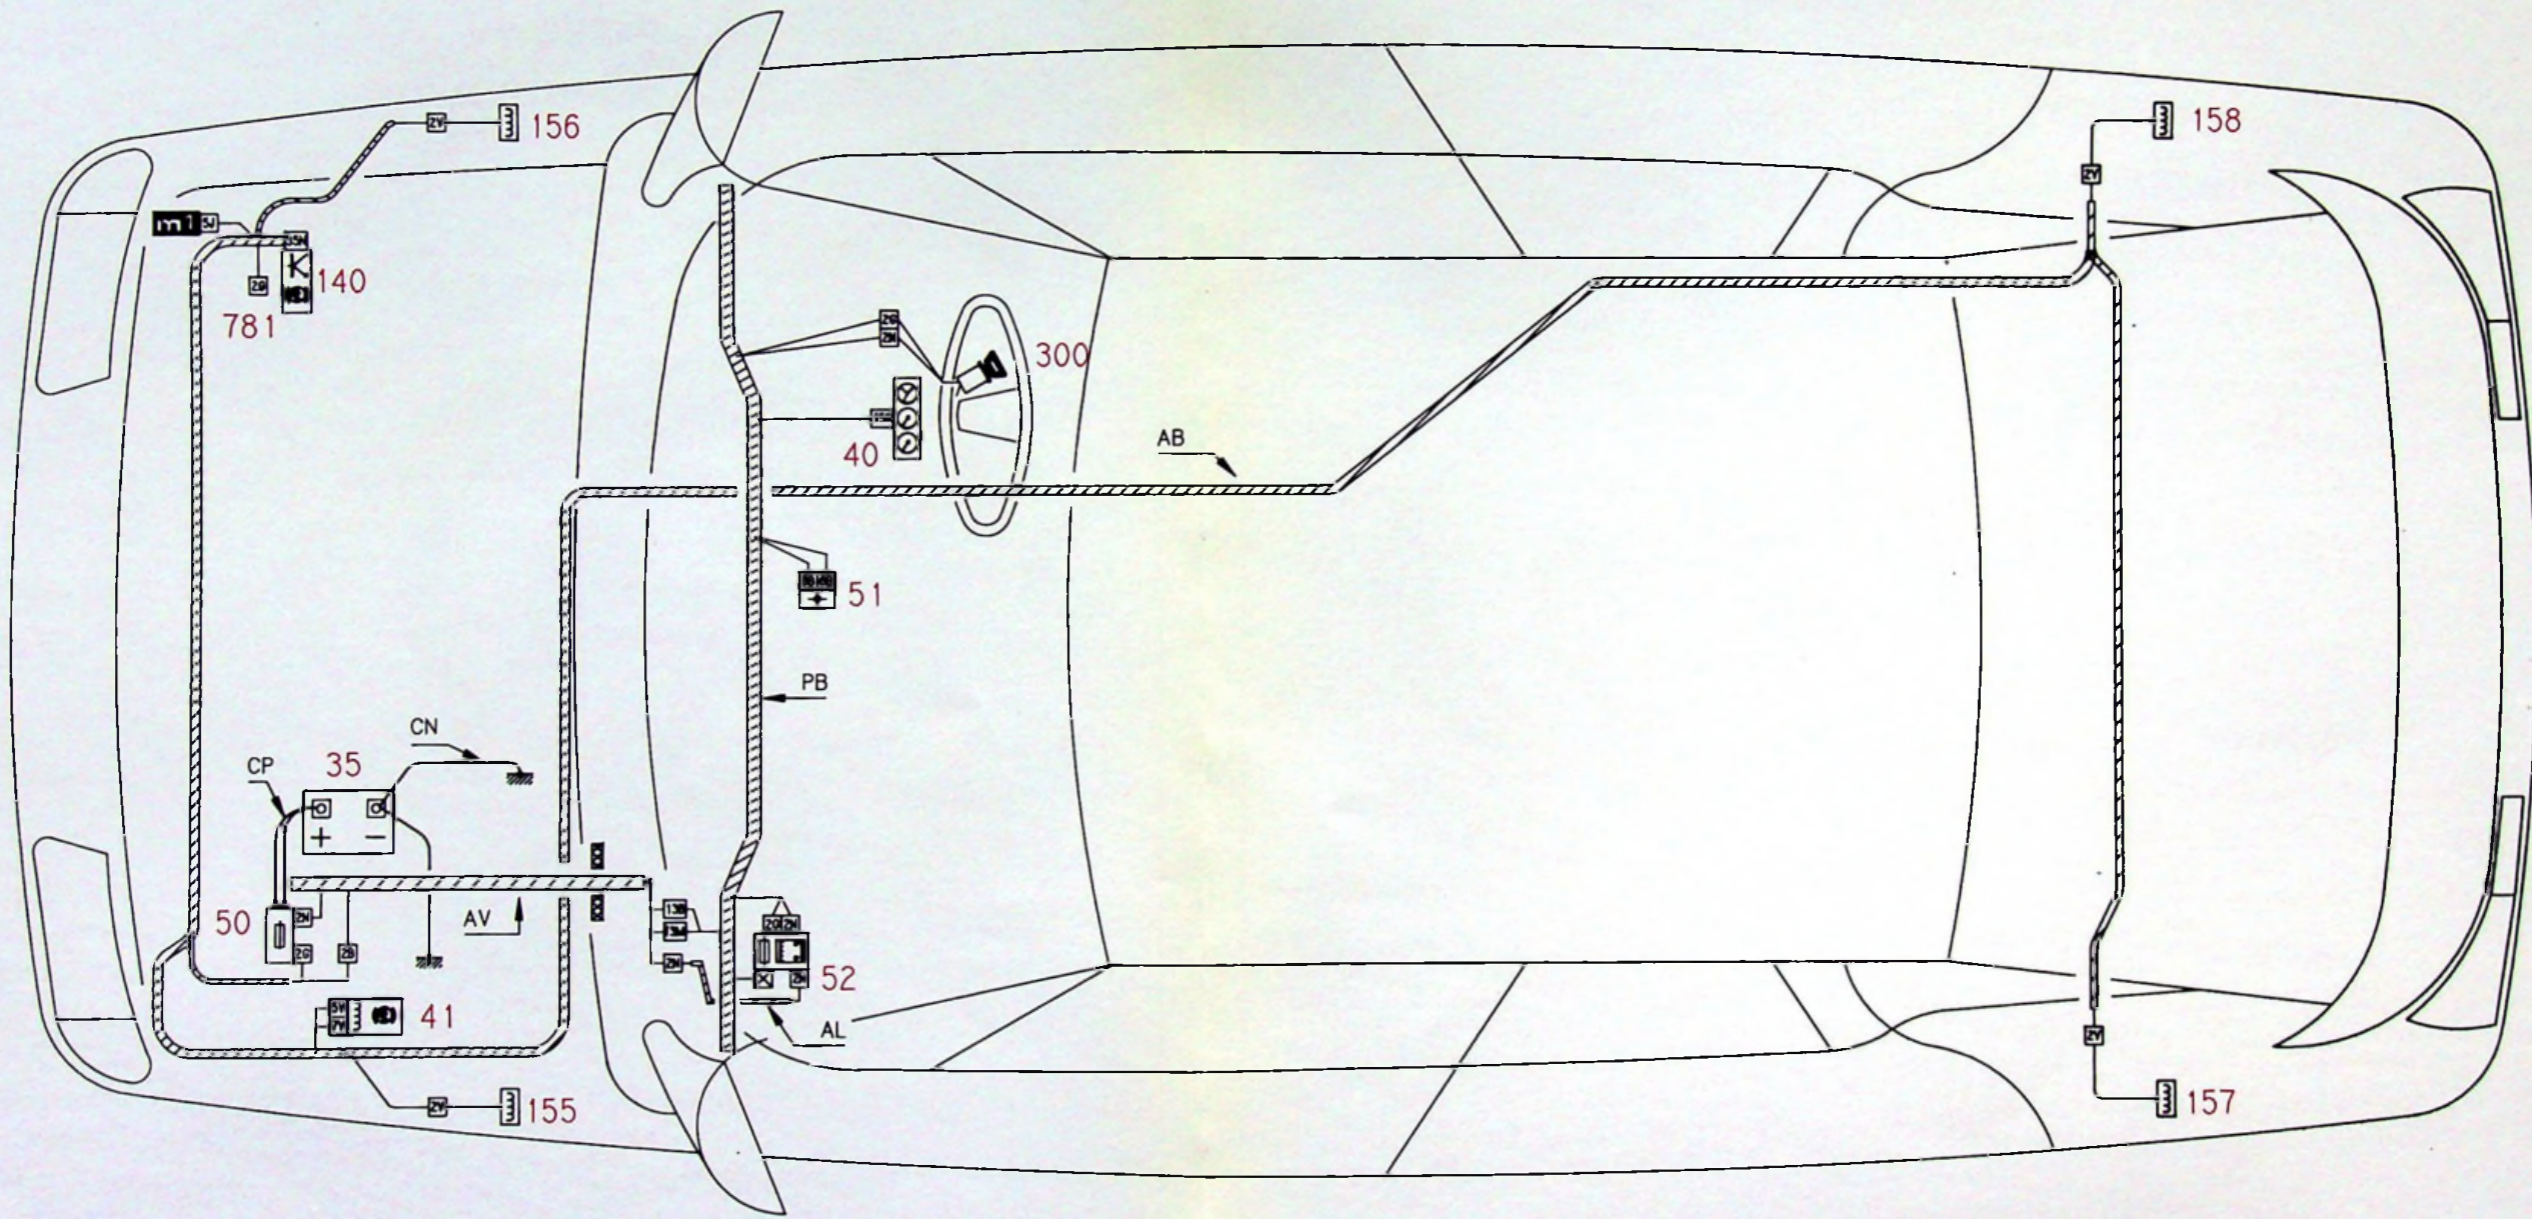




57



XM  
571-2/20

5

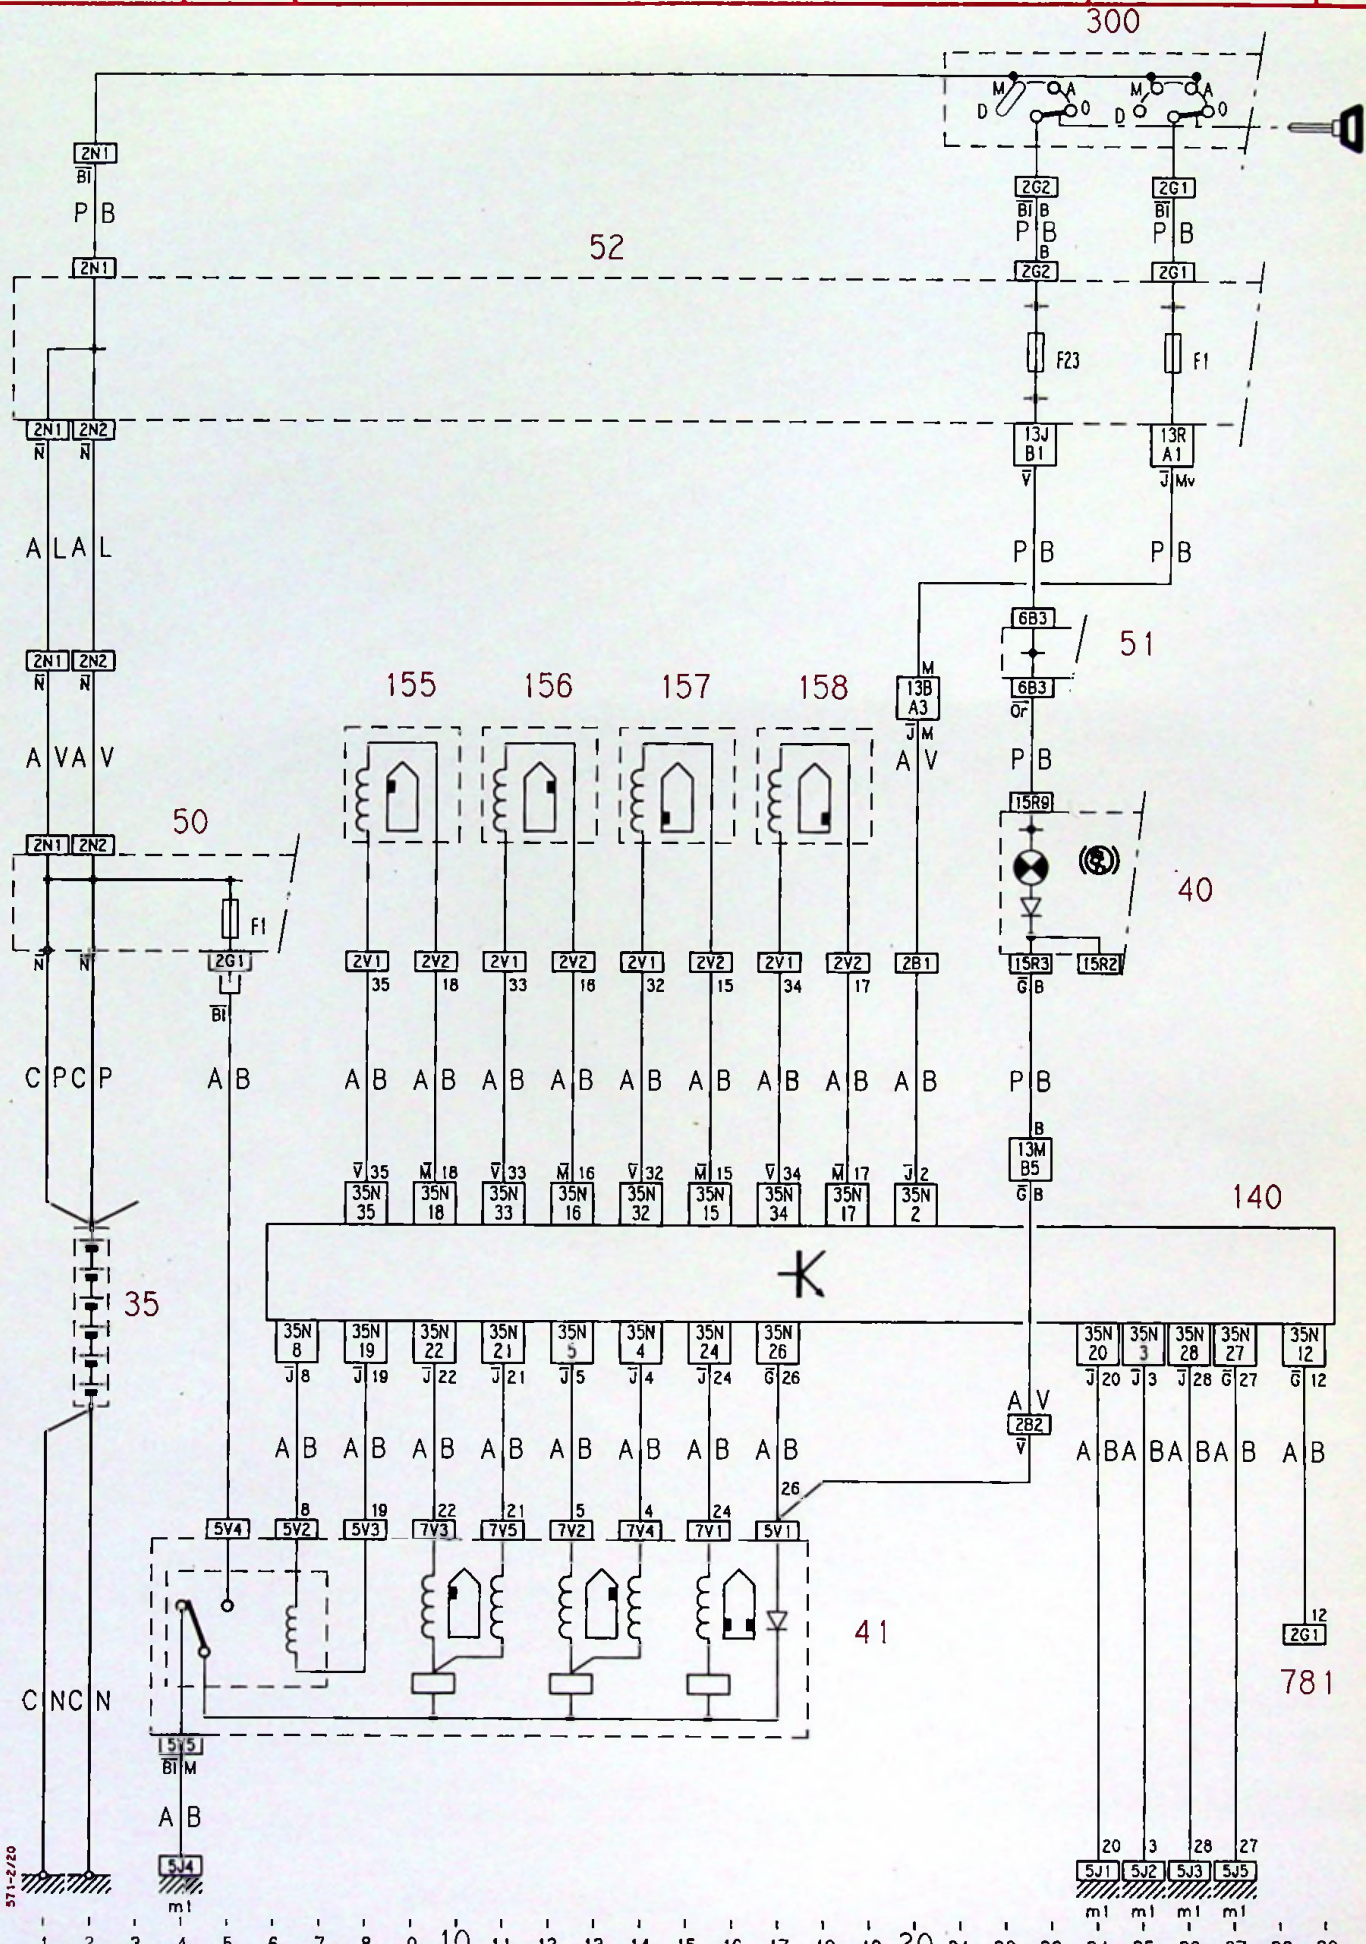




57



XM  
571-2/20a

5

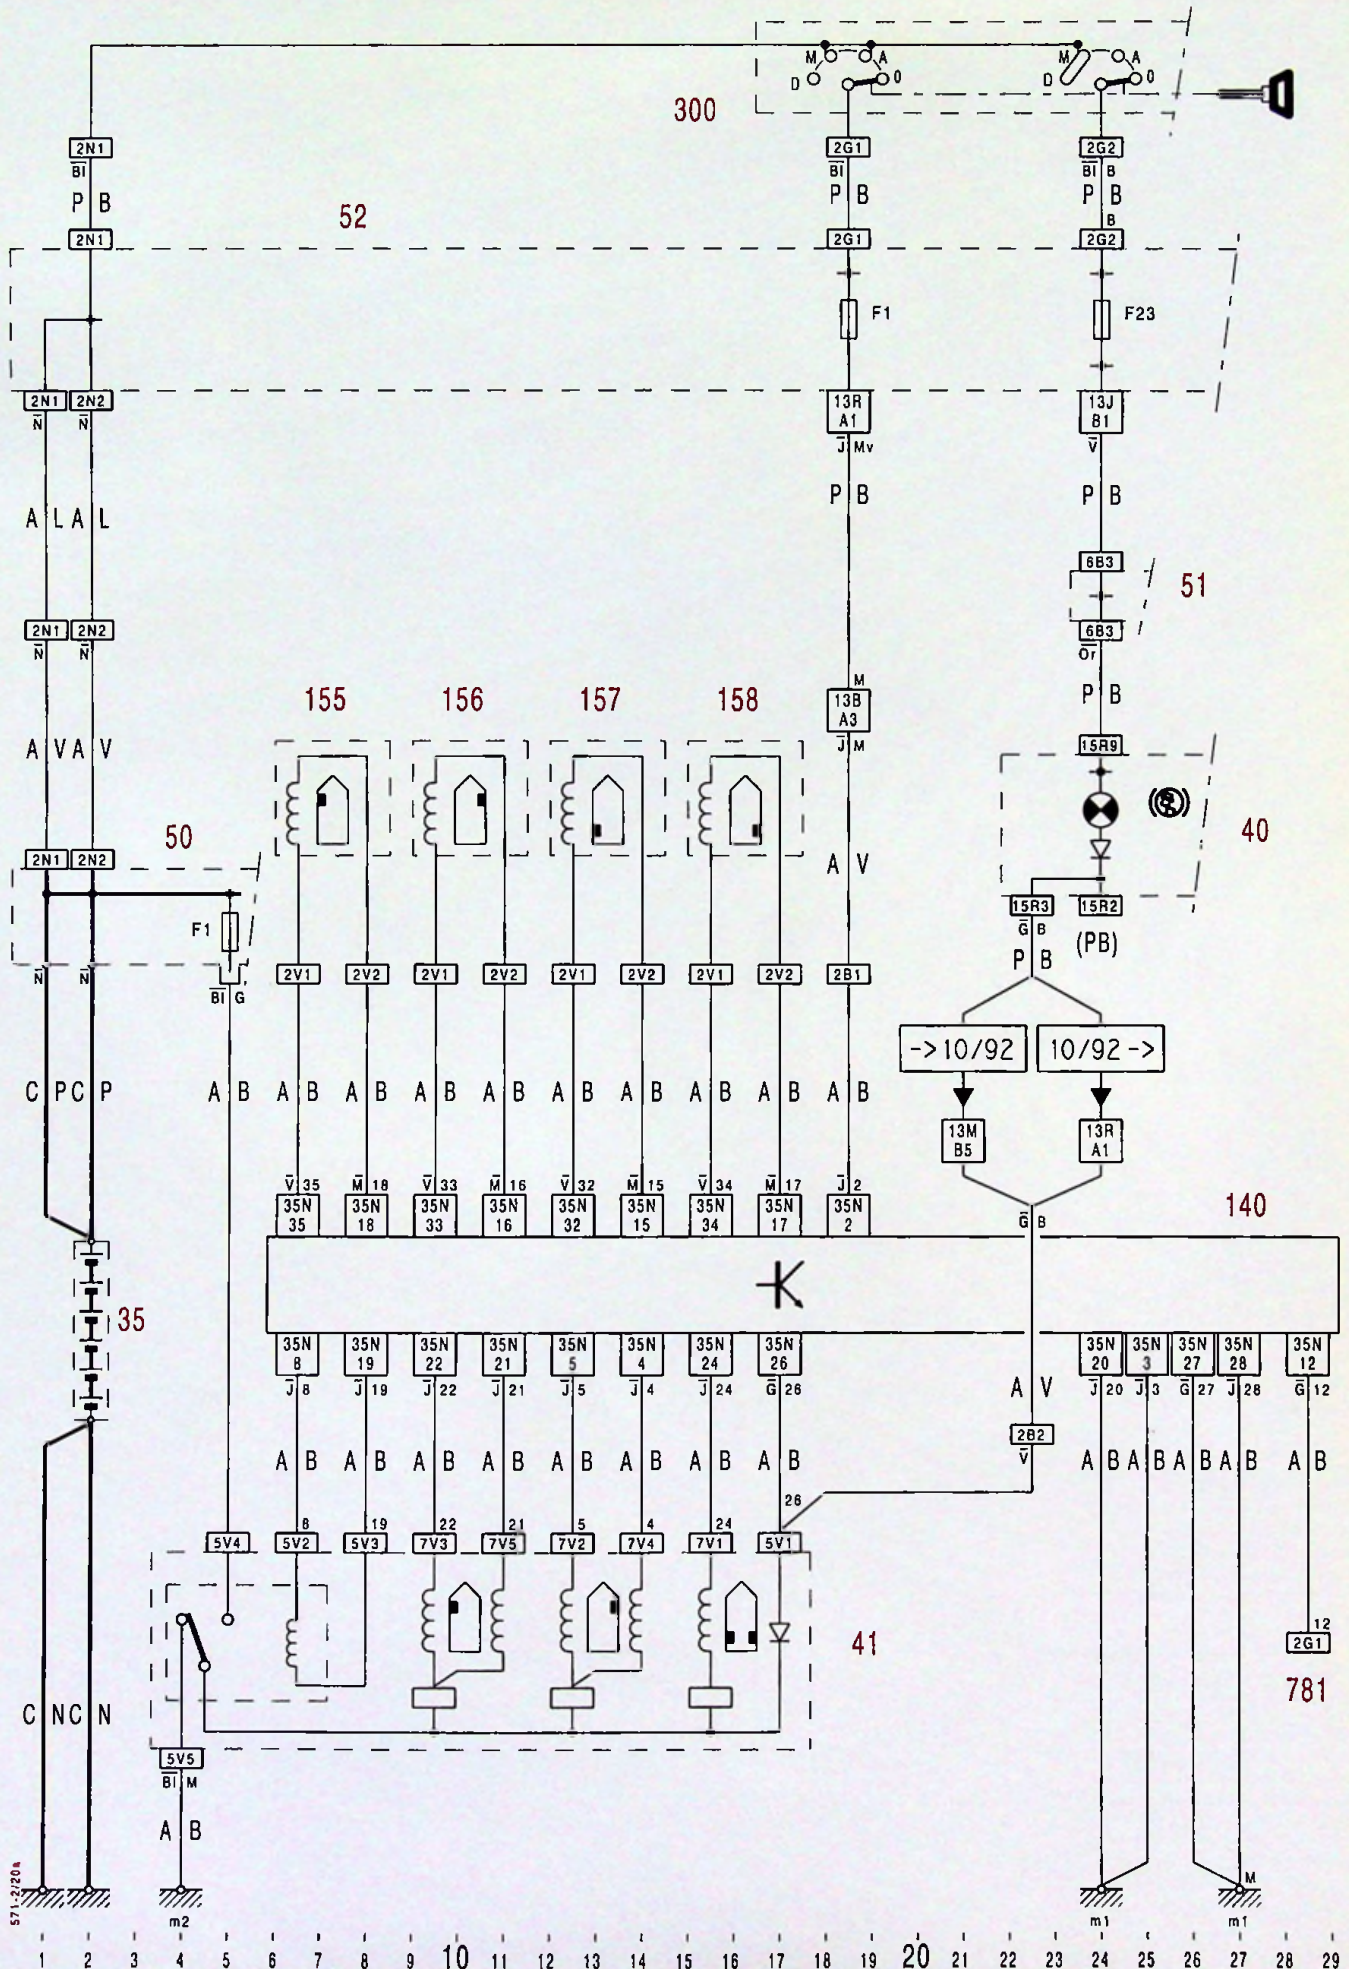



57



XM  
571-2/30


3

4

XM  
571-2/30



57

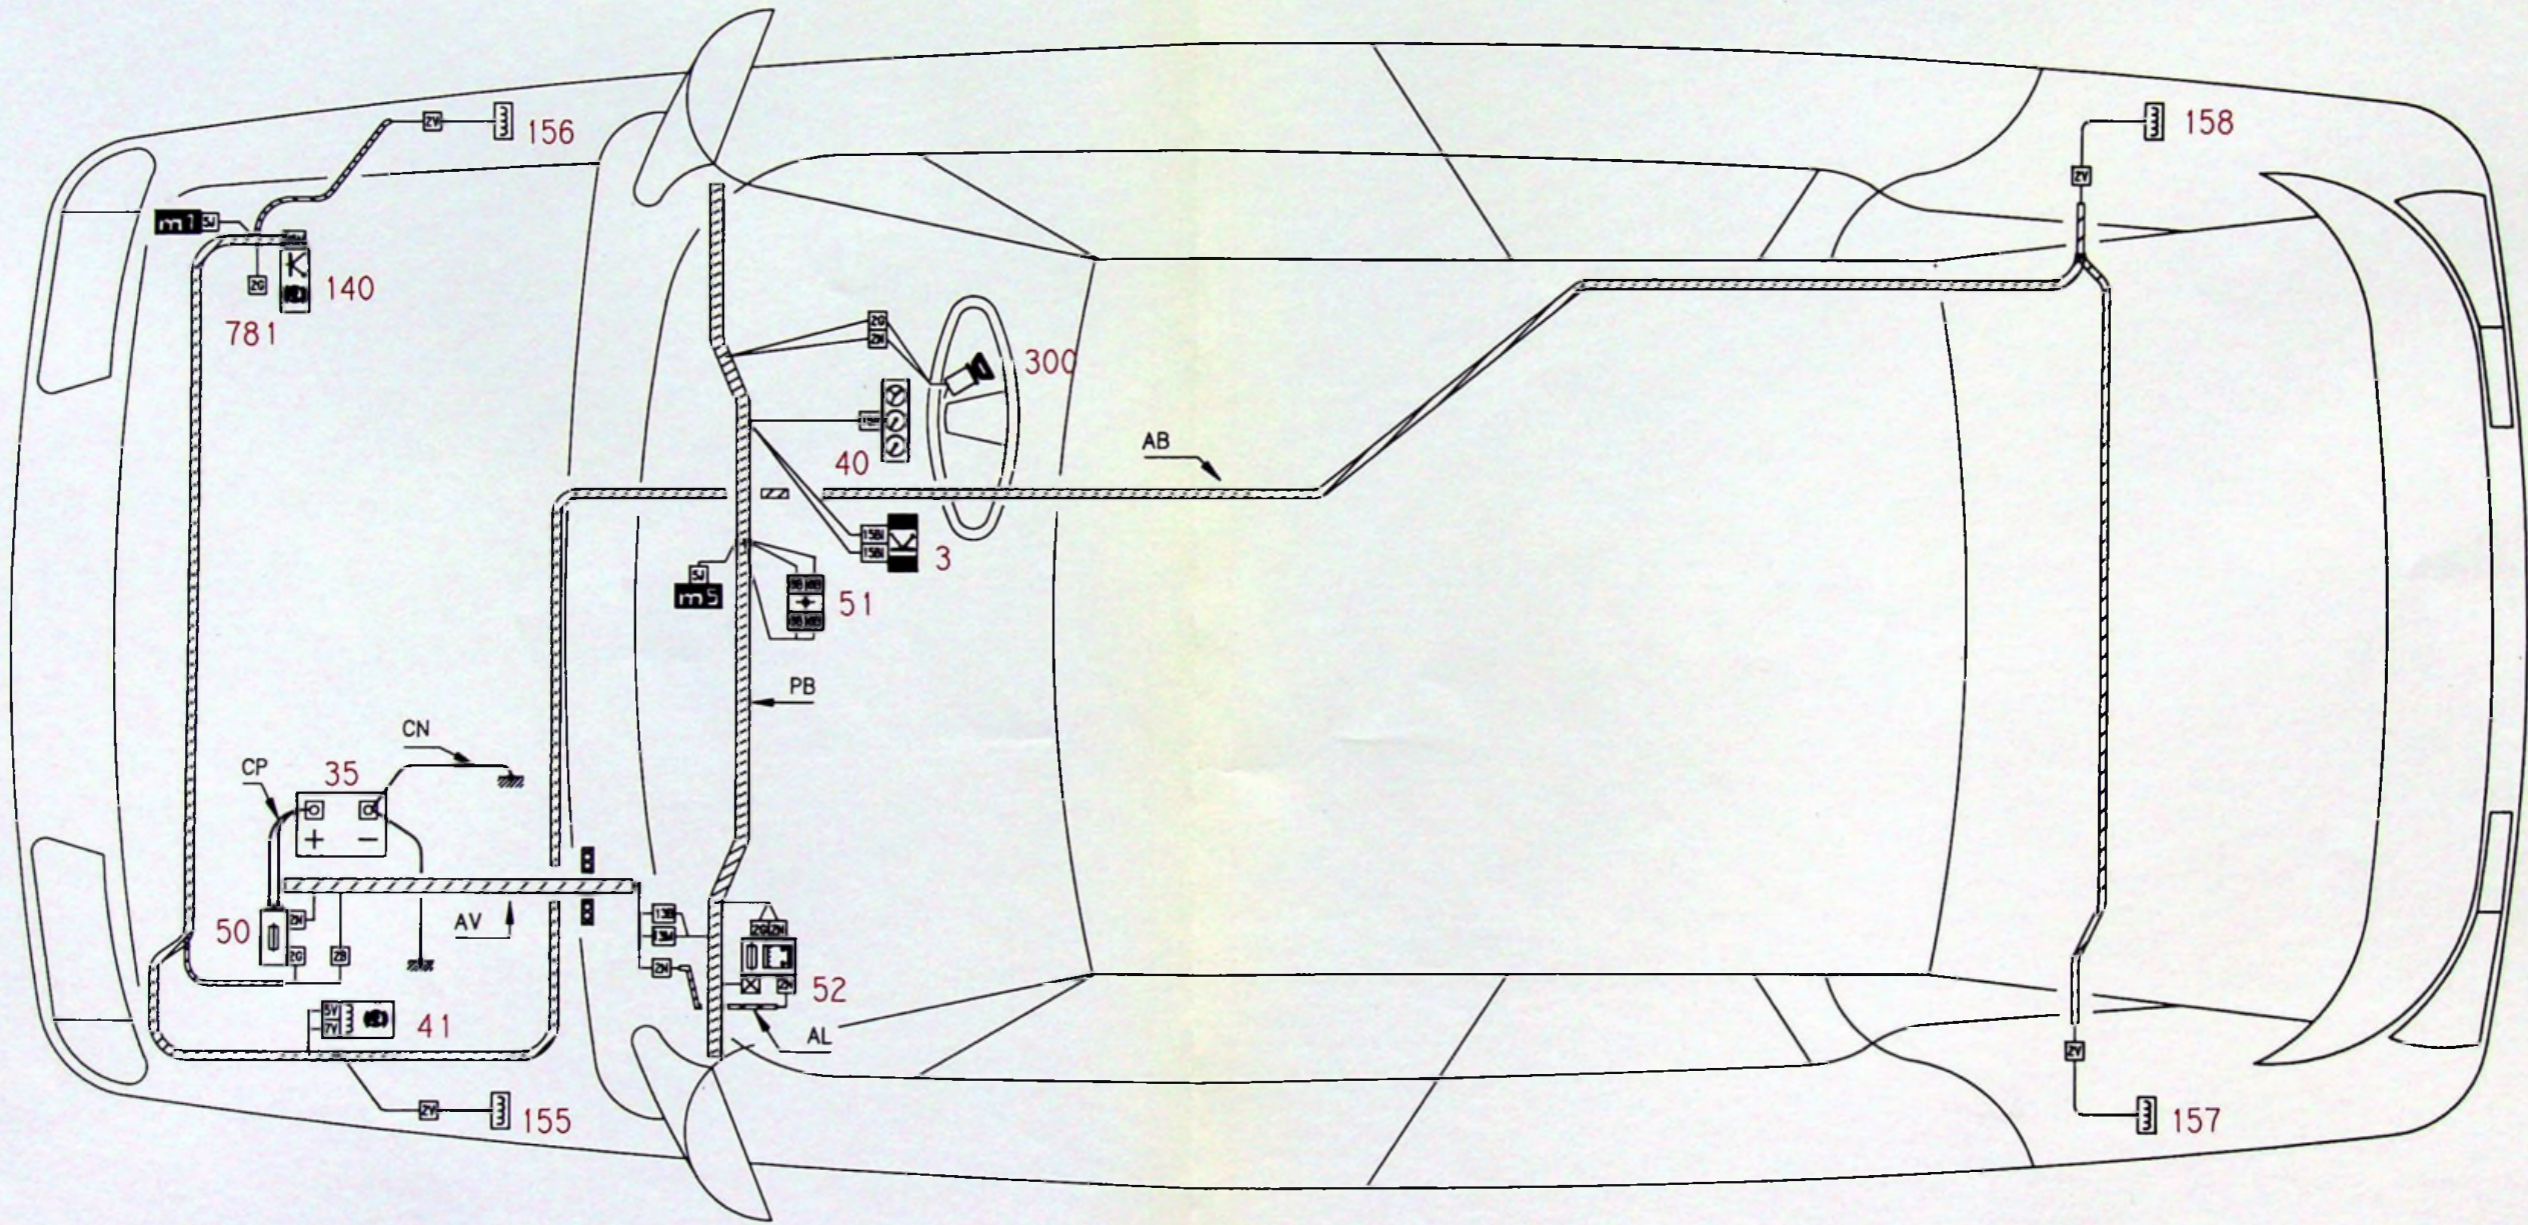






57



XM  
571-2/30

5

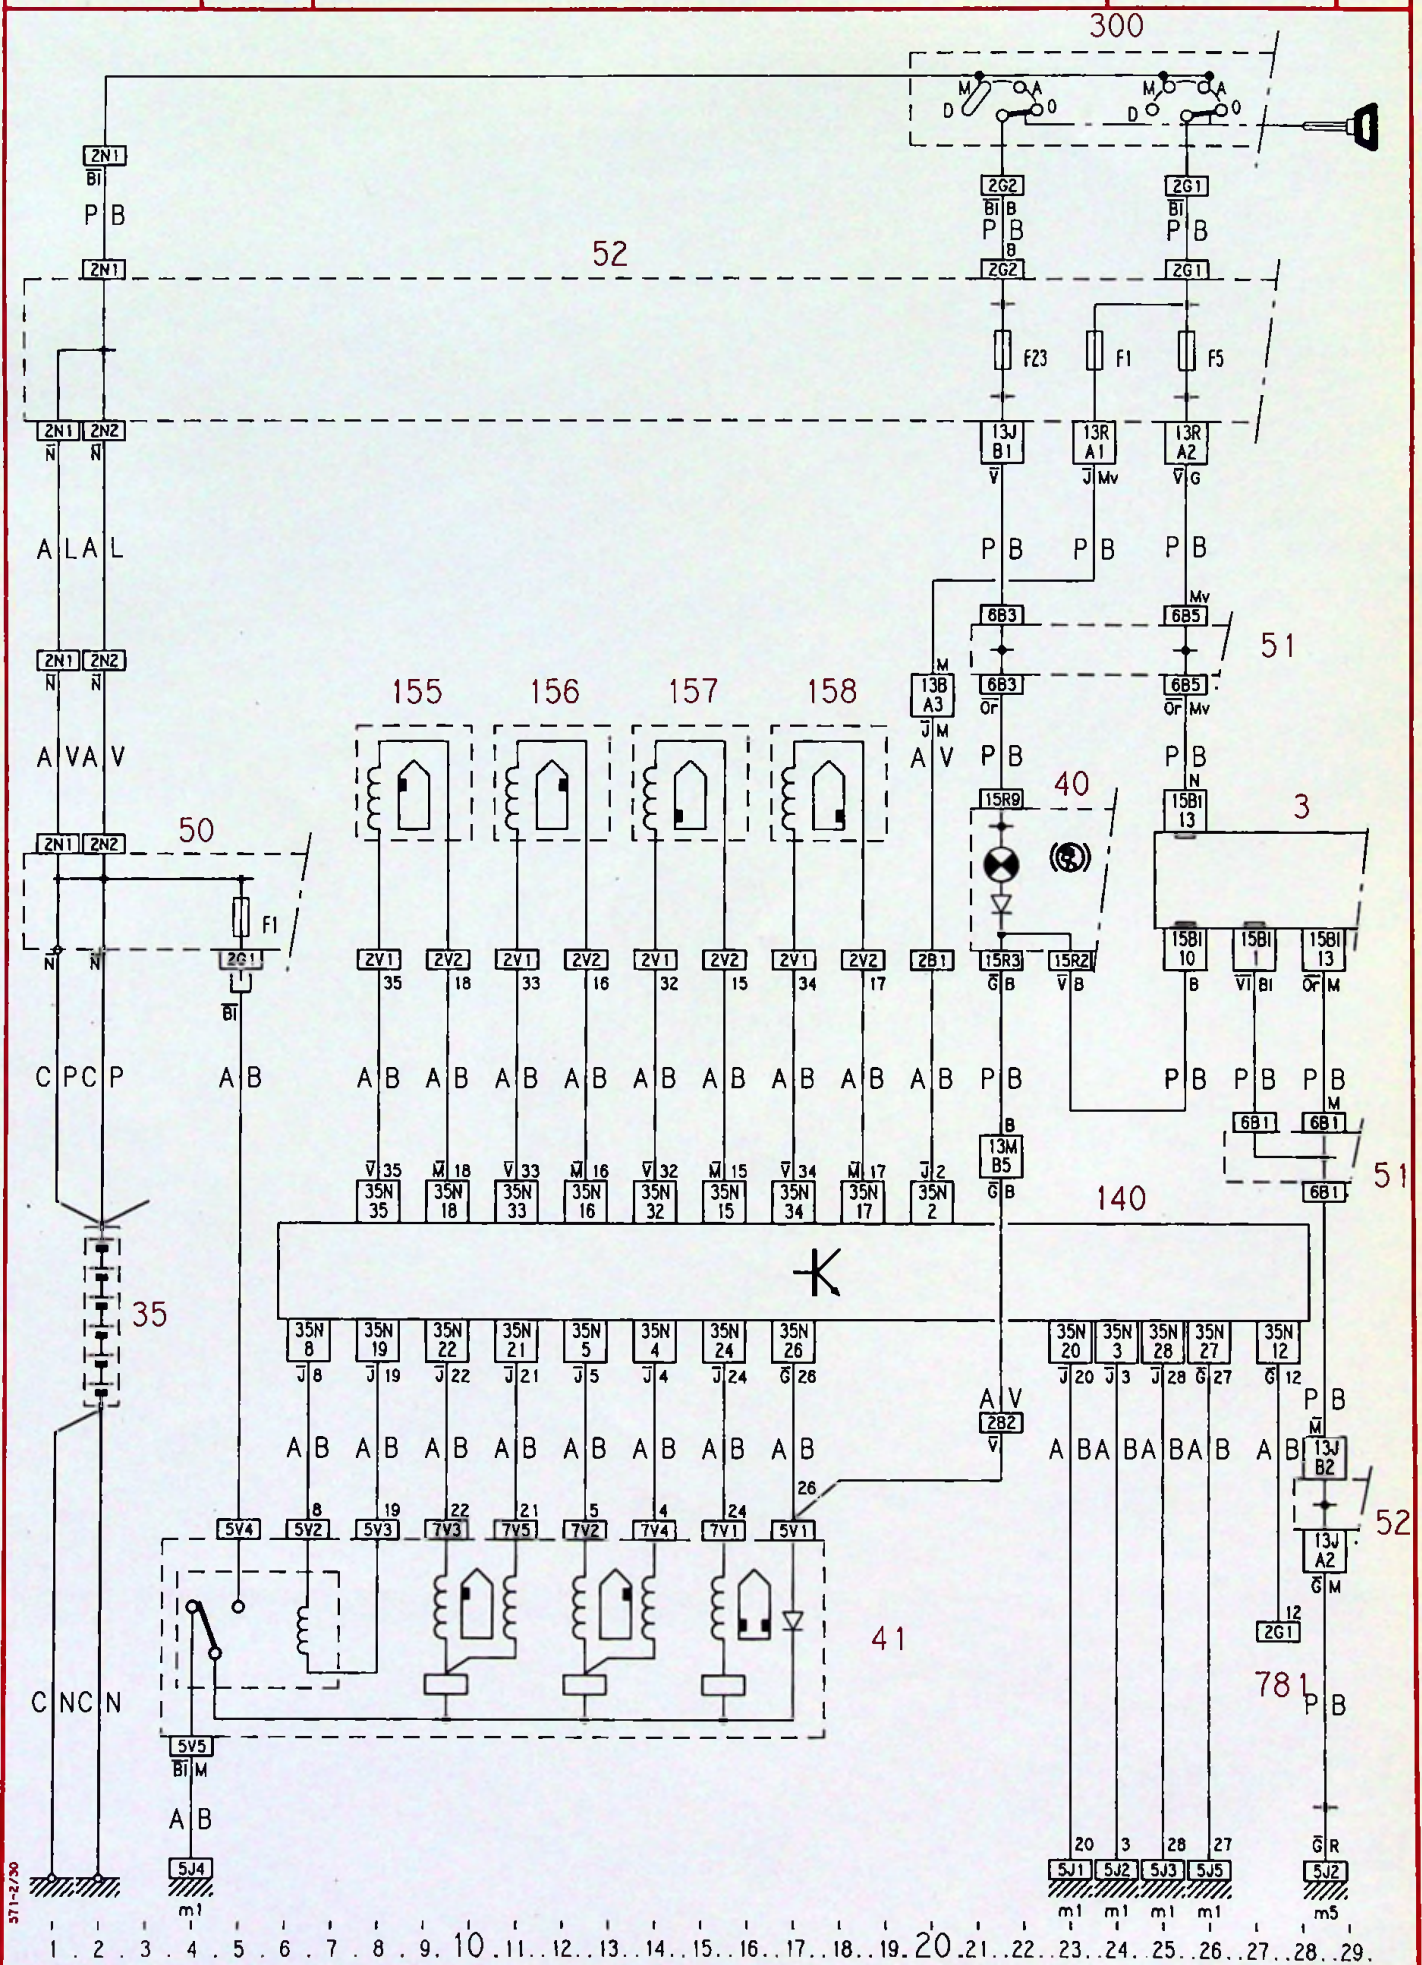




57



XM  
571-2/30a

5

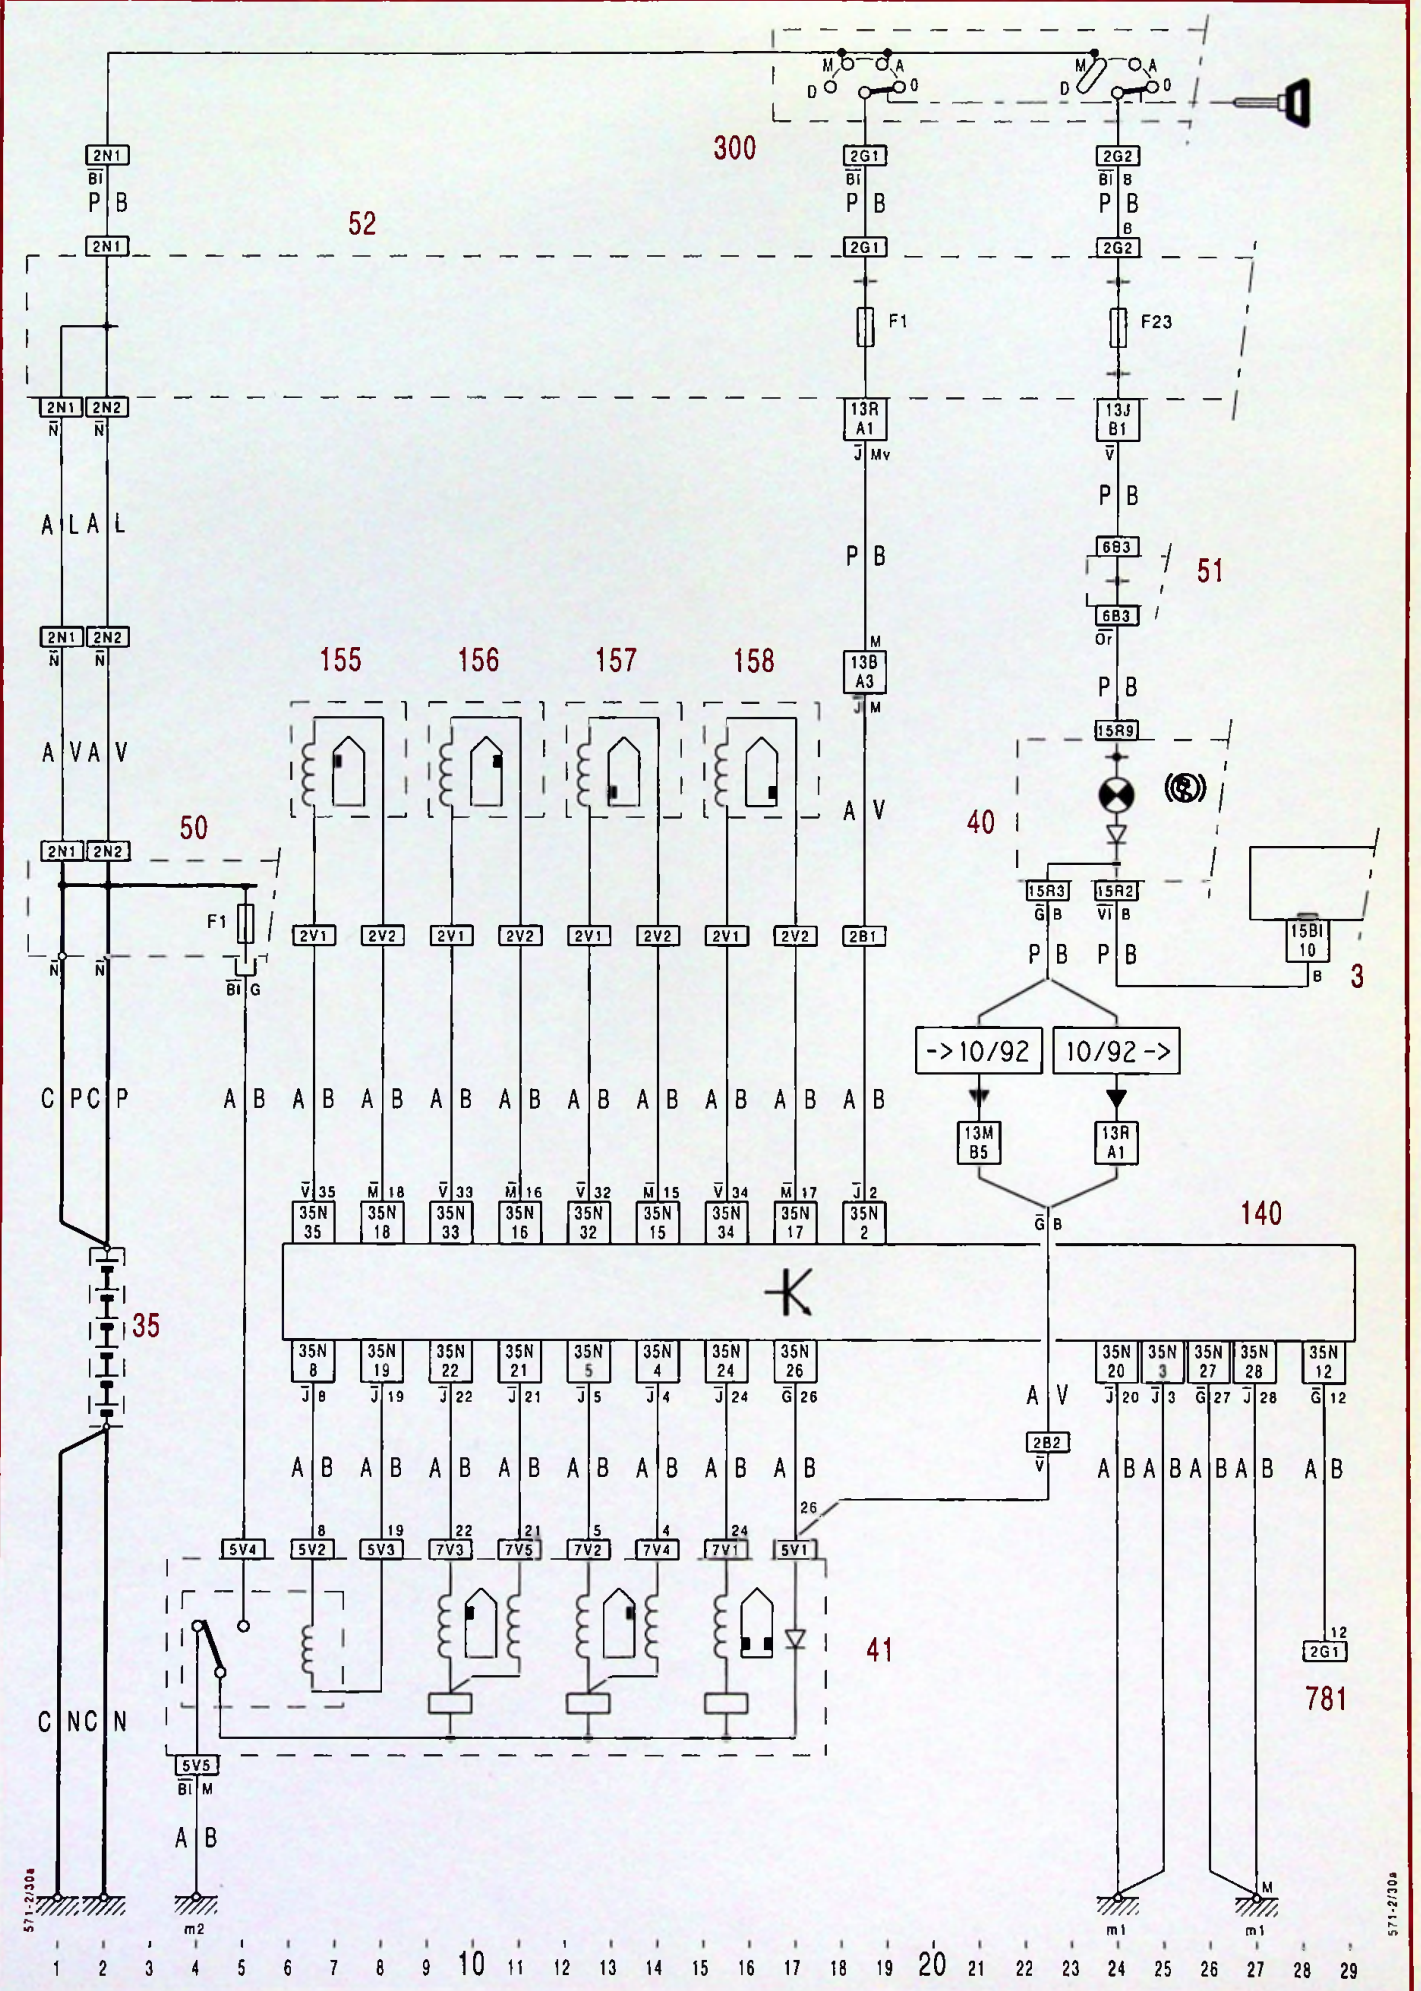



57



XM  
571-2/40


3

4

XM  
571-2/40



57

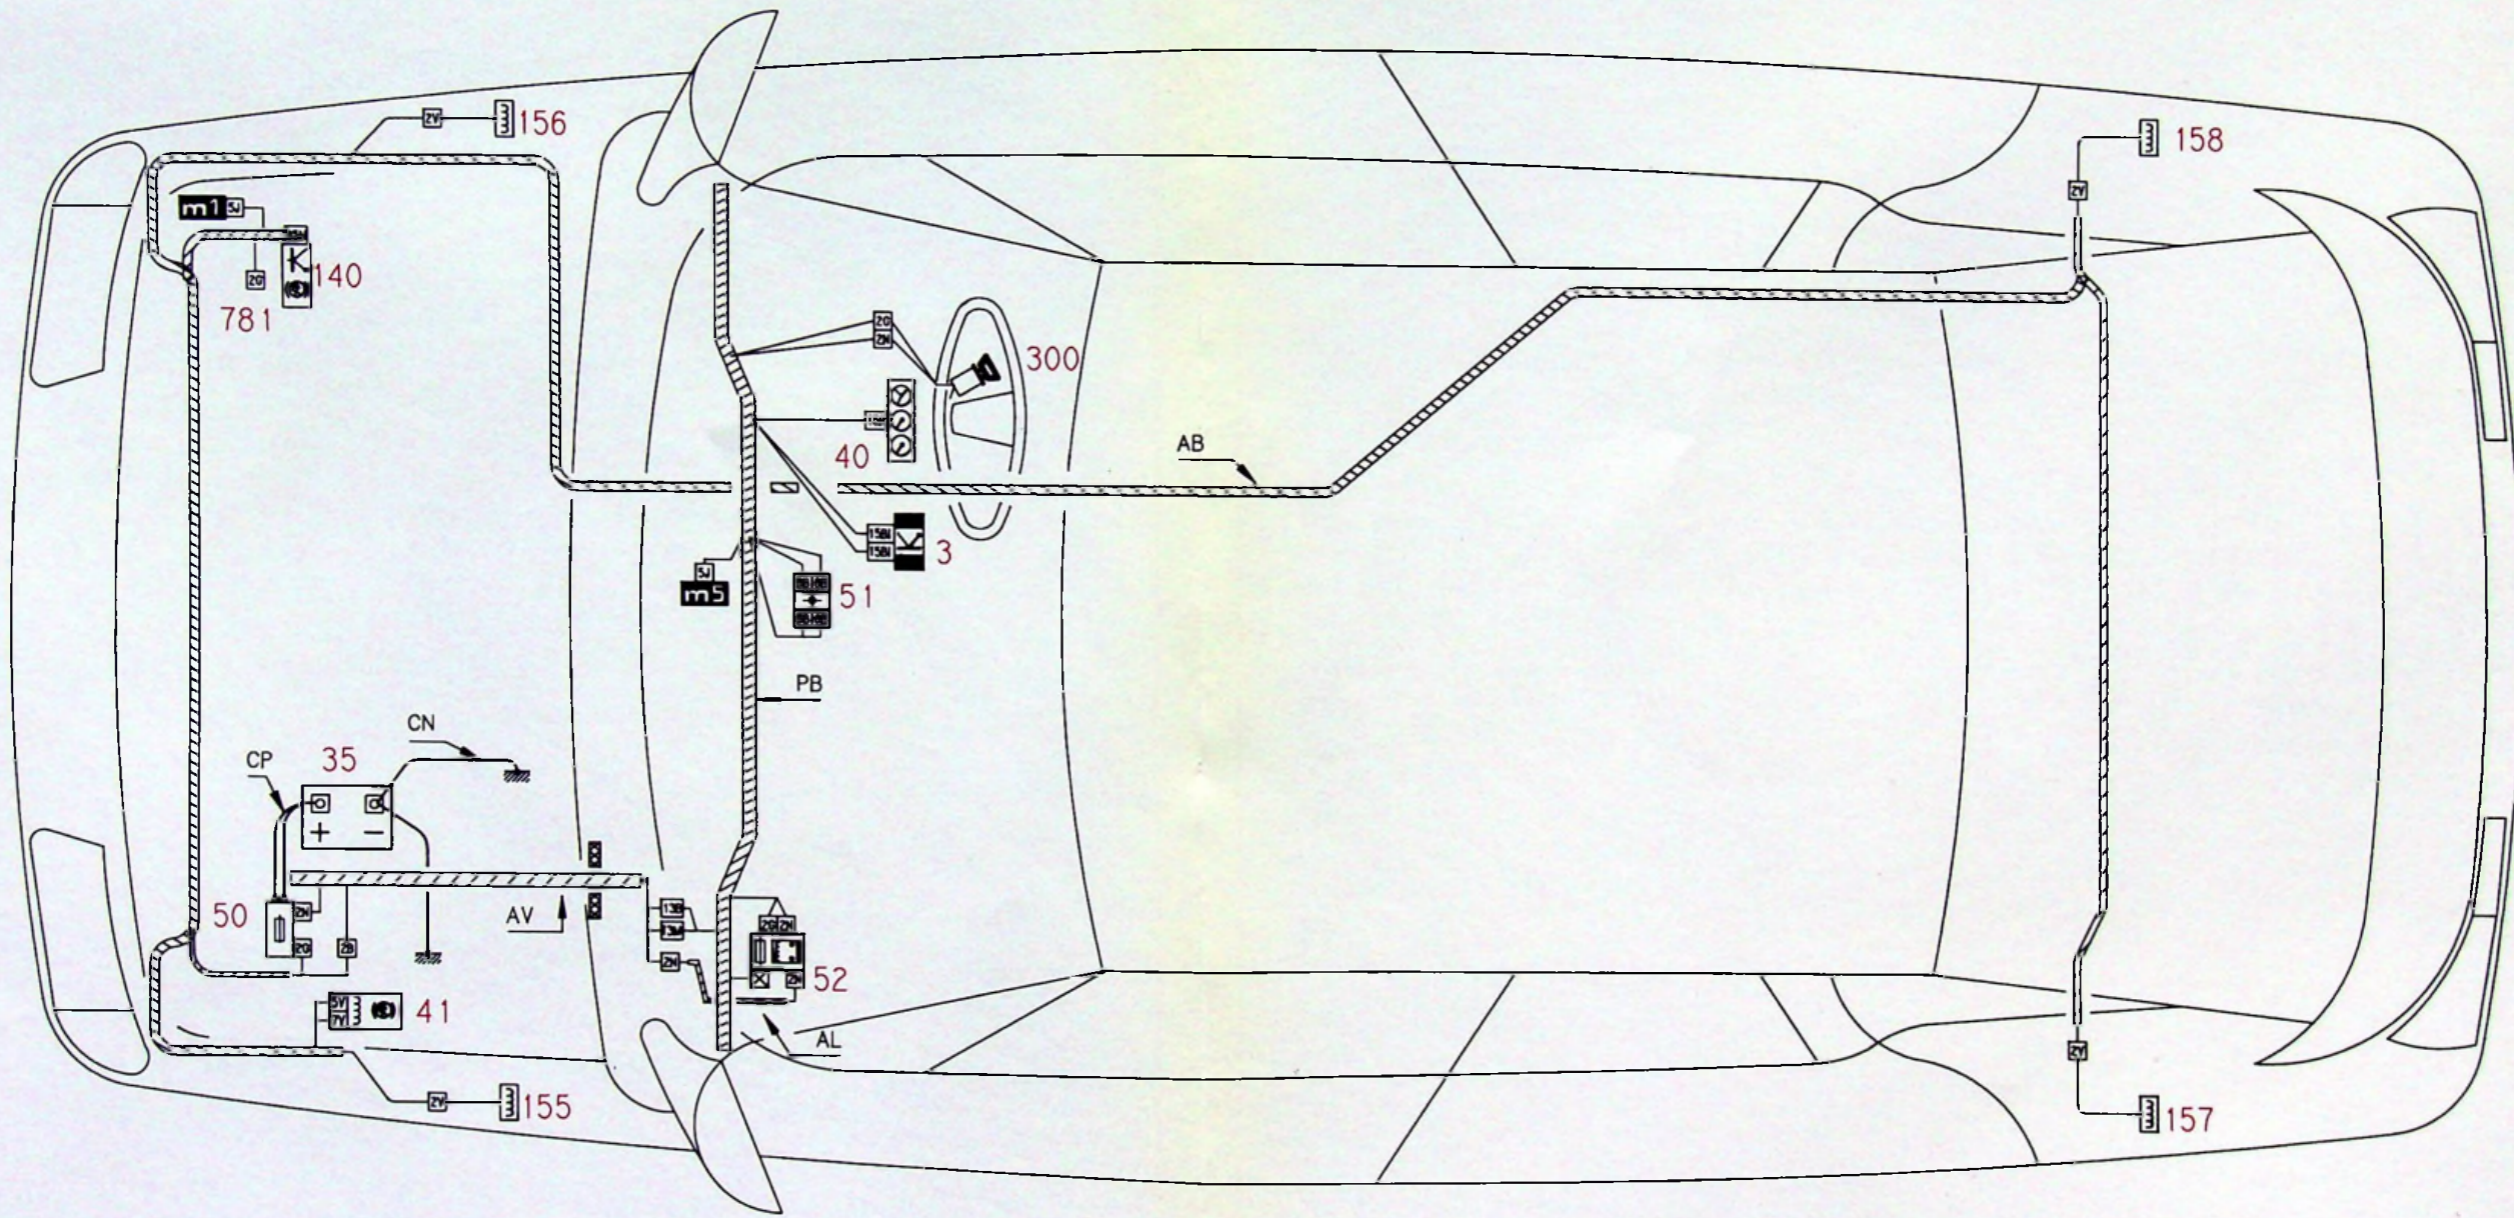




57



XM  
571-2/40

5

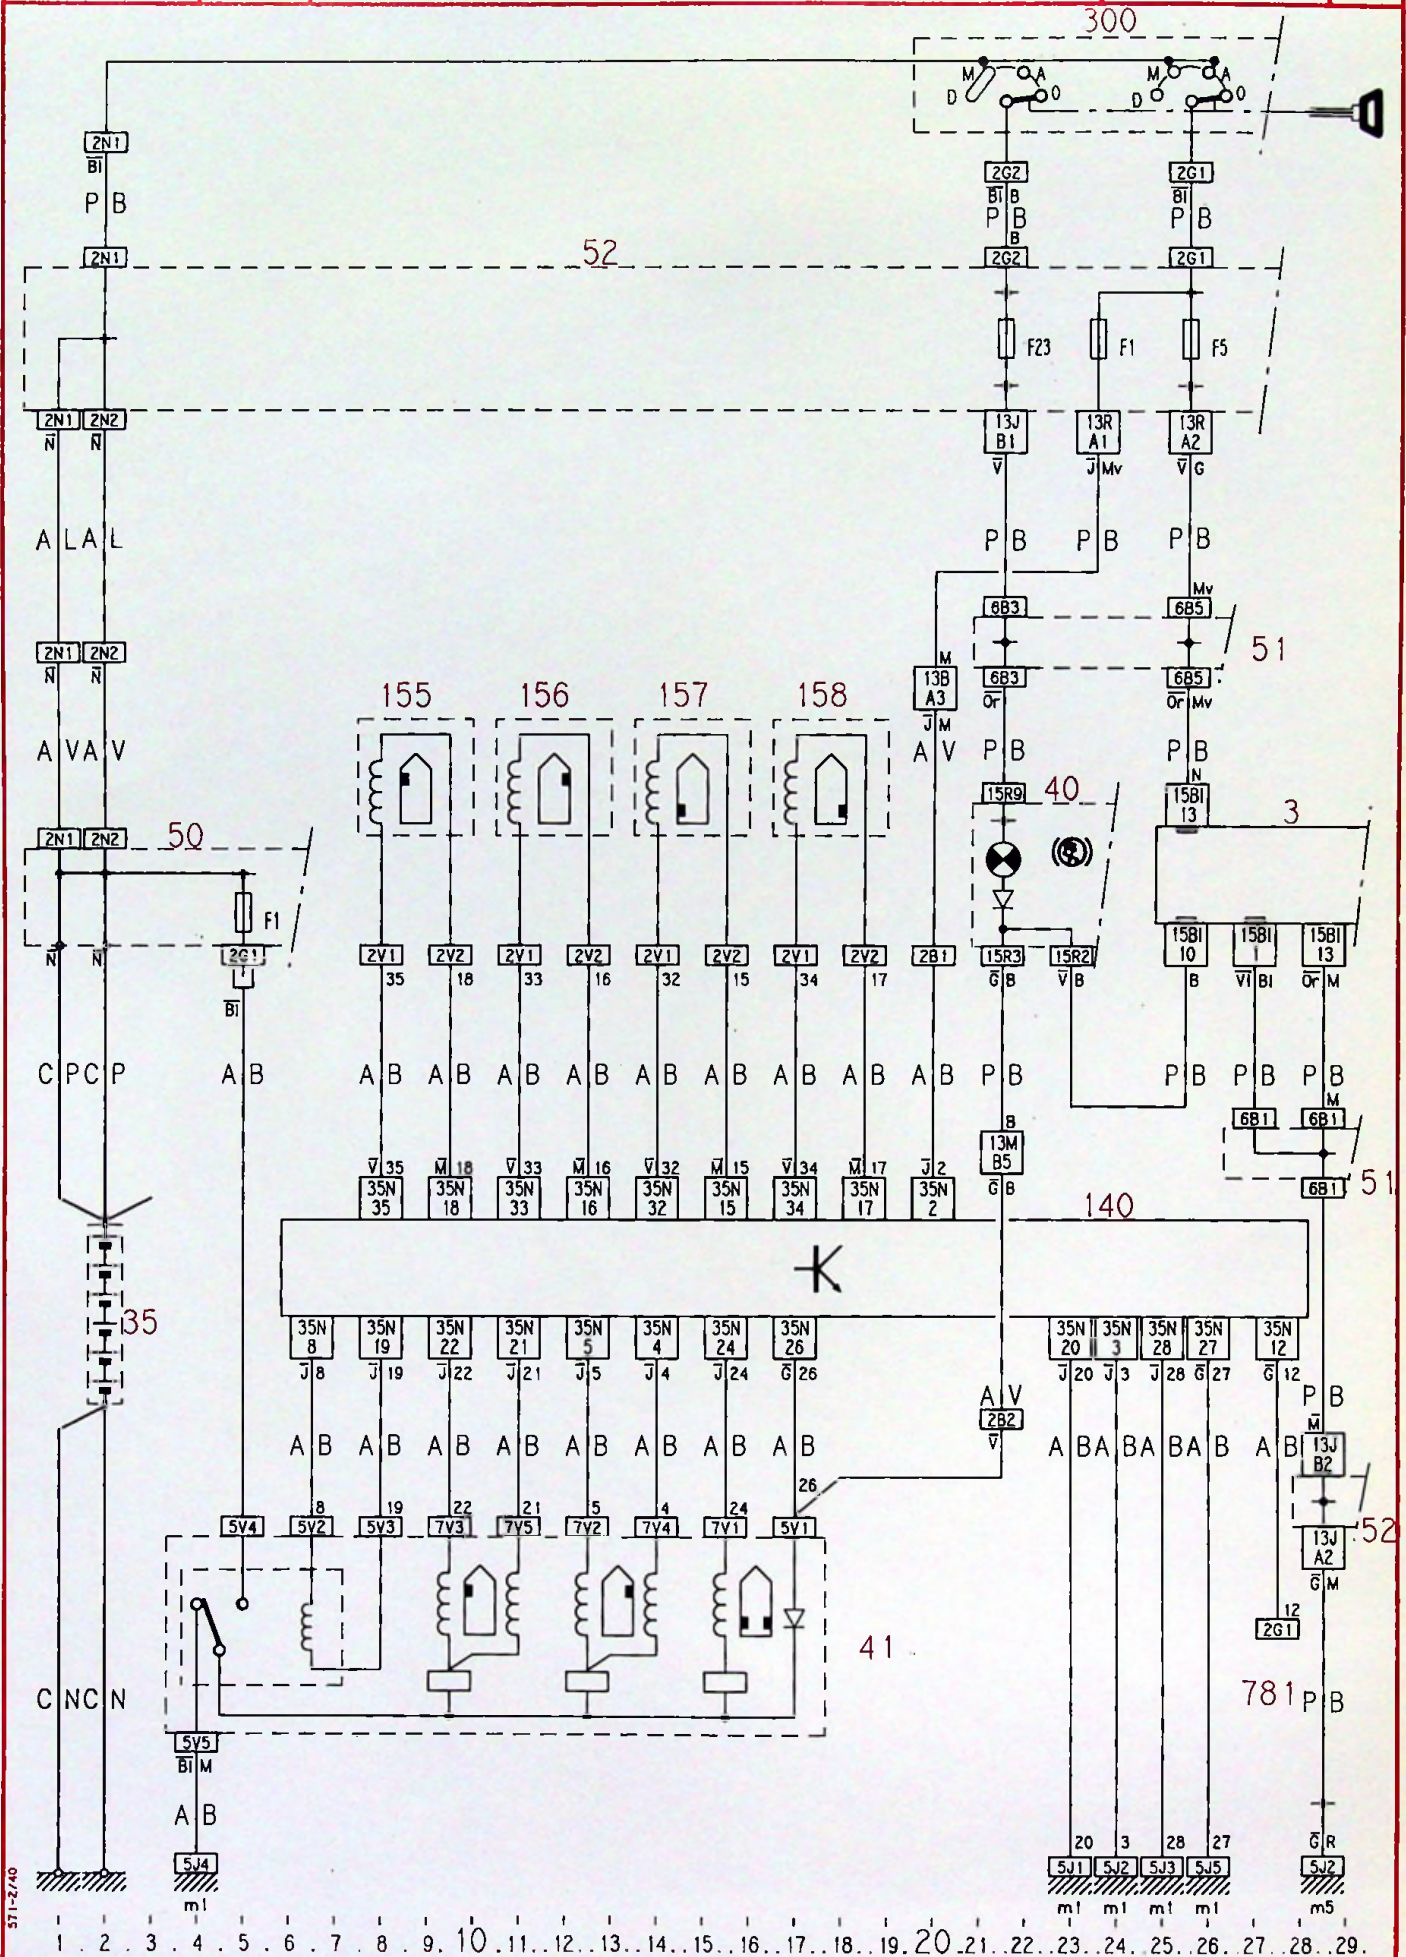



57



XM  
571-2/40a

5

